



Features Guide



Copyright © 2002, Xerox Corporation. All Rights Reserved. Unpublished rights reserved under the copyright laws of the United States. Contents of this publication may not be reproduced in any form without permission of Xerox Corporation.

Copyright protection claimed includes all forms of matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as styles, templates, icons, screen displays, looks, etc.

XEROX®, The Document Company®, the stylized X, CentreWare®, DocuPrint®, and Workset® are registered trademarks of Xerox Corporation. infoSMART™, Phaser™, PhaserPort™, PhaserSMART™, and PhaserTools™ are trademarks of Xerox Corporation.

Adobe®, Acrobat®, Acrobat® Reader®, Illustrator®, PageMaker®, Photoshop®, and PostScript®, ATM®, Adobe Garamond®, Birch®, Carta®, Mythos®, Quake®, and Tekton® are registered trademarks and Adobe Jenson™, Adobe Brilliant Screens™ technology, and IntelliSelect™ are trademarks of Adobe Systems Incorporated or its subsidiaries which may be registered in certain jurisdictions.

Apple®, LaserWriter®, LocalTalk®, Macintosh®, Mac® OS, AppleTalk®, TrueType2®, Apple Chancery®, Chicago®, Geneva®, Monaco®, and New York® are registered trademarks, and QuickDraw™ is a trademark of Apple Computer Incorporated.

Marigold™ and Oxford™ are trademarks of AlphaOmega Typography.

Avery™ is a trademark of Avery Dennison Corporation.

PCL® and HP-GL® are registered trademarks of Hewlett-Packard Corporation.

Hoefer Text was designed by the Hoefer Type Foundry.

ITC Avant Guard Gothic®, ITC Bookman®, ITC Lubalin Graph®, ITC Mona Lisa®, ITC Symbol®, ITC Zapf Chancery®, and ITC Zapf Dingbats® are registered trademarks of International Typeface Corporation.

Bernhard Modern™, Clarendon™, Coronet™, Helvetica™, New Century Schoolbook™, Optima™, Palatino™, Stempel Garamond™, Times™, and Univers™ are trademarks of Linotype-Hell AG and/or its subsidiaries.

MS-DOS® and Windows® are registered trademarks of Microsoft Corporation.

Wingdings™ in TrueType® format is a product of Microsoft Corporation. WingDings is a trademark of Microsoft Corporation and TrueType is a registered trademark of Apple Computer, Inc.

Albertus™, Arial™, Gill Sans™, Joanna™, and Times New Roman™ are trademarks of Monotype Corporation.

Antique Olive® is a registered trademark of M. Olive.

Eurostile™ is a trademark of Nebiolo.

Novell® and NetWare® are registered trademarks of Novell, Incorporated.

Sun® and Sun Microsystems® are registered trademarks of Sun Microsystems, Incorporated.

SPARC® is a registered trademark of SPARC International, Incorporated. SPARCstation™ is a trademark of SPARC International, Incorporated, licensed exclusively to Sun Microsystems, Incorporated.

UNIX® is a registered trademark in the US and other countries, licensed exclusively through X/Open Company Limited.

As an ENERGY STAR® partner, Xerox Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency. The ENERGY STAR name and logo are registered U.S. marks.



This product uses code for SHA-1 written by John Halleck, which is being used by his permission.

This product includes an implementation of LZW licensed under U.S. Patent 4,558,302.

Other marks are trademarks or registered trademarks of the companies with which they are associated.

Contents

Printer Components	1
Base configuration components	1
Front view of base configuration	1
Rear view of base configuration	2
Internal components	2
Printer options	3
Front view of printer options	3
Rear view of printer options	4
Front Panel Usage	5
Front panel description	5
Menu Map	6
Accessing printable pages	6
Error Messages	6
Driver Features	7
Print-quality modes	8
Secure prints, proof prints, and saved prints	11
Separation pages	14
Printing multiple pages to a single sheet (N-up)	15
Booklet printing	16
Negative and mirror images	18
Scaling	19
Auto Fit	20
Watermarks	21
Image smoothing	23
Custom size paper	24
Cover pages	28
Printer Settings	30
Printing the Startup Page	30
Power Saver	31
Protected mode for the front panel menus	31
Load paper timeout	32
Front panel intensity	32
Front panel contrast	33
Intelligent Ready mode	33
Front panel language	34

Fonts	35
Resident typefaces (PostScript).....	35
Resident typefaces (PCL5e/6).....	35
Printing a sample of available fonts	35
Downloading fonts	37
Downloading fonts from a Macintosh	38
Downloading fonts from a PC	38
Index	39


Printer Components

This section covers:

- Base configuration components — see page 1.
- Internal components — see page 2.
- Printer options — see page 3.


Base configuration components

Front view of base configuration

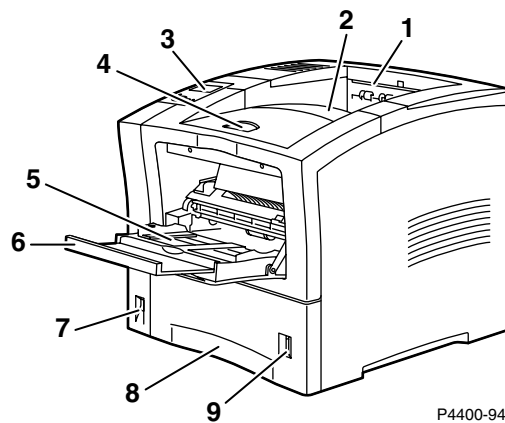


1. Paper exit slot
2. Standard Output Tray
3. Front panel
4. Front cover release
5. Multi-Purpose Tray
6. Multi-Purpose Tray extension
7. Power switch
8. Tray 1
9. Paper level gauge

Rear view of base configuration

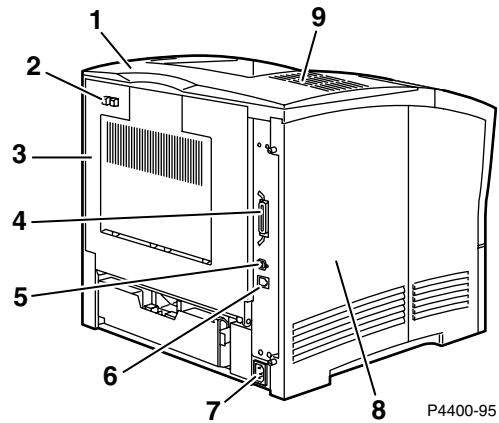


1. Option cover
2. Rear cover release
3. Rear cover (shown closed)
4. Parallel connector
5. USB connector
6. Ethernet UTP connector
7. Power cord receptacle
8. Left cover
9. Ventilation slots

Internal components

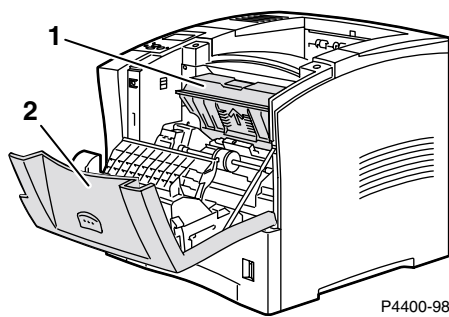

1. Print Cartridge
2. Front cover (shown open)

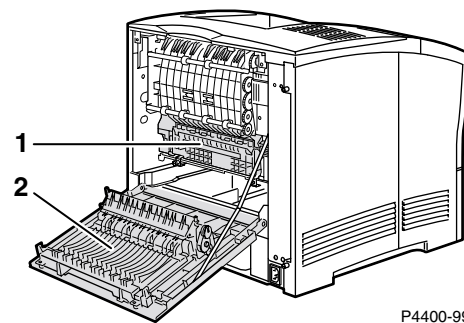

1. Fuser Cartridge
2. Rear Cover (shown open)


Printer options

In addition to the options shown on the following pages, other available options include:

- Internal hard drive
- Additional memory
- 16 Mbytes Flash Memory DIMM
- Phaser 4400B to 4400N upgrade

For part numbers and information about these options as well as consumables and paper, refer to the *Supplies* section of the *Support Guide* on the **Interactive Documentation CD-ROM** or link to the Xerox supplies web site at: www.xerox.com/officeprinting/4400supplies.


Front view of printer options

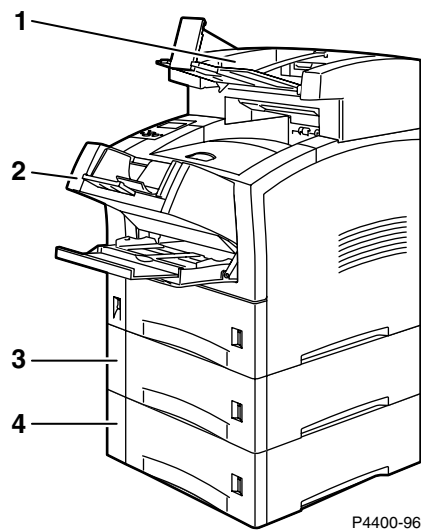

P4400-96

1. 500-Sheet Stacker
2. Envelope feeder
3. 550-sheet feeder with tray
4. 550-sheet feeder with tray

Rear view of printer options

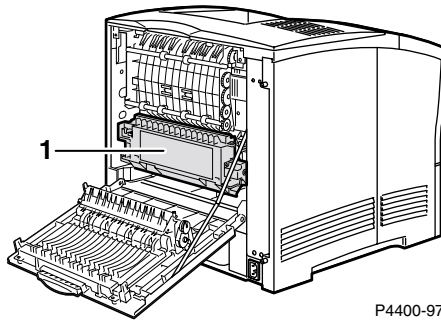

P4400-97


1. Automatic duplex unit

Front Panel Usage

Front panel description

The front panel:

- Displays the printer's operating status (**Printing**, **Ready to Print**, etc.).
- Alerts you to load paper, replace consumables, and clear jams.
- Enables you to access tools and information pages to help troubleshoot problems.
- Enables you to change printer settings and network settings; driver settings override the printer's front panel settings.
- Enables you to print Secure Print, Proof Print, and Saved Print jobs that you have stored on the printer's optional hard disk. For more information, see the printer driver help or the *Driver Features* section of the *Features Guide* on the **Interactive Documentation CD-ROM**.
- Whenever you insert paper in a tray, alerts you to select the paper type so that the correct fuser setting is used. For more information, see the *Trays* section of the *Trays and Paper Guide* on the **Interactive Documentation CD-ROM**.

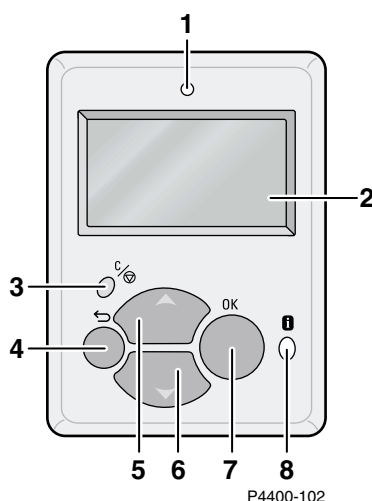

P4400-102

1	Status indicator light Blinks = Printer is busy Green = OK Yellow = Warning, continues to print Red = Problem, stops printing	5	Up Arrow key Scrolls upward through the menus
2	Graphic front panel display	6	Down Arrow key Scrolls downward through the menus
3	Cancel Print key	7	OK key
4	Back key	8	Information key Provides additional details about the current display message, such as jam clearing instructions

Menu Map

For a complete list of printable pages, print the Menu Map:

1. Select **Menus** on the front panel and press the **OK** key.
2. Select **Print Menu Map** and press the **OK** key.


Accessing printable pages

Access these pages from the **Printable Pages Menu** (or the **Support Menu**):

1. At the front panel, scroll to the **Printable Pages Menu** using the **Down Arrow** or **Up Arrow** key and press the **OK** key.
2. Scroll to menu item for the desired printable page (such as **Print Paper Tips Page**) using the **Down Arrow** or **Up Arrow** key and press the **OK** key.

Error Messages

When there is a problem with the printer, the front panel display (1) shows the error message. Press the **i** button (2) for more information about the error message and ways to solve the problem.

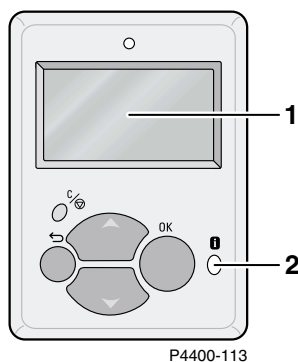

PHASER™ 4400 LASER PRINTER

Menu Map

Print Menu Map

Prints this page

Supplies Info Menu

Provides supplies usage information

Connection Setup Menu

Provides tools to help connect the printer

Printer Setup Menu

Provides tools to set up the default printer behavior

Printable Pages Menu

Provides a list of all of the pages stored in the printer for easy printing

Support Menu

Provides tools and information on troubleshooting the printer

Items marked with * do not appear on the 4400B.

Optional Features

Legend:

Requires optional

1 Hard drive

2 Trays

3 Stacker

4 Duplex unit

5 Flash DIMM

Print Paper Tips Page
Print Cartridge Toner Life

Fuser Life
Reset Fuser Life

Total Print Count

Print Connection Setup Page
Print Configuration Pages
TCP/IP Address Menu *
TCP/IP *

CentreWare IS *
EtherTalk *
NetWare *
Set IPX Frame Type *

IPP *
SLP *
SSDP *
Set Ethernet Speed *

Parallel Setup Menu
USB Setup Menu
Reset Connection Setup

Print Configuration Pages
Set Front Panel Language

Tray Setup Menu

Intelligent Ready
Startup Page
Set Front Panel Intensity
Set Front Panel Contrast
Set Power Saver Timeout
Set Load Paper Timeout

MPT Setup Menu
Envelope Feeder Setup Menu²
Tray 1 Setup Menu
Tray 2 Setup Menu²
Tray 3 Setup Menu²
Set Custom Units
Set Tray Sequence
Fuser Configuration Menu

Output Tray Switch³
Low Toner Prints

Job Defaults Menu

Accessible Front Panel

Reset Printer Setup Menu

Set Paper Source
Set Paper Destination³
Job Offset³
Set 2-Sided Printing⁴
Set Print Quantity
Set Print-Quality Mode
PostScript Job Defaults Menu
Reset Job Defaults

Reset Printer Setup NOW
Power Saver
Metric Defaults

Error info
Image Smoothing
Edge-to-Edge Printing

Set Font Number
Set Pitch
Set Point Size
Select Symbol Set
Set Orientation
Set Form Length
Line Termination
Edge-to-Edge Printing

Proof Print Jobs¹
Saved Print Jobs¹
Secure Print Jobs¹
Office Demonstration
2-Sided Demonstration⁴
Print PCL Font List
Print PostScript Font List
Print Test Prints

Print Disk Directory¹
Print Flash Directory⁵
Print Usage Profile
Print Configuration Pages
Print Help Guide
Print Diagnostics Pages
Print Paper Tips Page

Print Connection Setup Page
Print Startup Page
Print Menu Map
Service Pages Menu *

Print NetWare Start Log
Print NetWare Runtime Log
Print TCP/IP Start Log
Print TCP/IP Runtime Log
Print AppleTalk Start Log
Print AppleTalk Runtime Log
Print Hardware Start Log

Print Help Guide

Printer Identification

Improve Print Quality?

Model
Printer Name
Print Server *
IP Address *
Select for Installation *
Serial #
Activation Date

Print Diagnostics Pages
Print Paper Tips Page

Network Questions? *

Supplies Info Menu

same as above

Resolve Paper Jams?

Print Connection Setup Page
Print Configuration Pages
Print NetWare Start Log
Print NetWare Runtime Log
Print TCP/IP Start Log
Print TCP/IP Runtime Log
Print AppleTalk Start Log
Print AppleTalk Runtime Log
Print Hardware Start Log
PostScript Error Info
Reset Connection Setup

Print Paper Tips Page
Online Jam Prevention Guide

Usage Profile Menu

Service Tools Menu

Print Usage Profile
Email Full Report *
Email Job Report *

Reset NVRAM
Fault History
Hexadecimal Mode

Driver Features

This section covers the following:

- Print-quality modes — see page 8.
- Secure prints, proof prints, and saved prints — see page 11.
- Separation pages — see page 14.
- Printing multiple pages to a single sheet (N-up) — see page 15.
- Booklet printing — see page 16.
- Negative and mirror images — see page 18.
- Scaling — see page 19.
- Auto Fit — see page 20.
- Watermarks — see page 21.
- Image smoothing — see page 23.
- Custom size paper — see page 24.
- Cover pages — see page 28.

Print-quality modes

You can choose among two print-quality modes to obtain the best combination of speed and print quality for your job. Other printing options are also available.

Print-quality mode

600x600 dpi

- General-purpose mode for high-speed printing.
- Suitable for most office use.

True 1200x1200 dpi

- Highest-quality prints.
 - Unavailable in the Phaser 4400B model.
-

Other printing options

Draft

- Reduces the amount of toner placed on the page.
- Causes pages to be printed lighter.

Fax Friendly Black

- Changes shades of gray to textured patterns of black and white.
 - Available upon request; for more information, contact Xerox Customer Support.
-

Maximum speed

For all print-quality modes, the maximum speed is the following:

- Plain letter-sized paper: up to 26 ppm
- Plain A4-sized paper: up to 25 ppm

The approximate number of pages per minute (ppm) does not include I/O or image processing time. Two-sided (duplex) jobs, complex jobs, and jobs with fuser temperatures other than Medium can run at a slower speed.

Selecting a print-quality mode

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. In the Print dialog box, select the Print Quality pull-down menu. 3. Select the desired mode for Quality. (For Draft Mode, click the Advanced Options tab.)
MacOS X	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. In the Print dialog box, select the Printer Features pull-down menu. 3. Select the Print Quality tab. 4. Select the desired mode for Quality. (For Draft Mode, click the Advanced Options tab.)
Windows 95, Windows 98, or Windows Me	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab under Print Quality, select 600x600 dpi or True 1200x1200 dpi. (For Draft Mode, click More Layout Options.)
Windows 95, Windows 98, or Windows Me	PCL5e	<p>PCL5e supports only 600x600 dpi and draft mode.</p> <ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. Click More Layout Options to change the Draft option.
Windows 95, Windows 98, or Windows Me	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Image Options tab under Print Quality, move the slider to 600x600 dpi or True 1200x1200 dpi. (For Draft, click More Layout Options on the Setup tab.)
Windows 2000 or Windows XP	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Paper/Quality tab under Print Quality, select 600x600 dpi or True 1200x1200 dpi. (For Draft Mode, click the Advanced button on the Layout tab and change the setting under Document Options and Printer Features.)

Selecting a print-quality mode (Continued)

Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Paper/Quality tab under Print Quality, select 600x600 dpi or True 1200x1200 dpi. (For Draft Mode, click the Advanced tab and change the setting under Document Options and Printer Features.)
Windows 2000 or Windows XP	PCL5e	<p>PCL5e supports only 600x600 and draft mode.</p> <ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Advanced button on the Layout tab. 3. Under Document Options and Printer Features, select the Draft Mode option.
Windows NT	PCL5e	<p>PCL5e supports only 600x600 and draft mode.</p> <ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Advanced tab. 3. Under Document Options and Printer Features, select the Image Quality option.
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Image Options tab under Print Quality, select 600x600 dpi or True 1200x1200 dpi. (For Draft, click More Layout Options on the Setup tab.)

Secure prints, proof prints, and saved prints

These features are available if your printer has an internal hard drive. Choose one of the following special job types:

- **Secure Print:** Print confidential documents; your 4-digit numeric password-protected jobs are stored on the printer's hard drive. The jobs print only after you enter the 4-digit number on the printer's front panel, then are automatically deleted from the hard drive.
- **Proof Print:** Print only one copy of a multiple copy job so you can proof the copy. To print the remaining copies, select the job name on the printer's front panel; the job is then automatically deleted from the hard drive. If you do not want the remaining copies, delete the job at the front panel.
- **Saved Print:** Store the job on the printer's hard drive so you can print it on demand. The job is not deleted after printing. This is useful for any document you frequently print, such as tax forms, personnel forms, or requisition forms.

Note

These jobs are stored on the hard drive and remain in the printer even when it is powered off. There is a limit of 100 jobs on the hard drive per type. When the printer reaches the limit, it deletes the oldest job per type automatically before adding a new one.

Specifying a secure print, proof print, or saved print job

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, click on General. 2. Select Job Type from the pull-down menu, then choose the job type. 3. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.
MacOS X	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, select the Printer Features pull-down menu. 2. Select the Job Type tab, and then select Secure Print, Proof Print, or Saved Print. 3. From the drop-down lists, select the numbers for the password.
Windows 95, Windows 98, or Windows Me	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, choose the Job Type. 4. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.

Specifying a secure print, proof print, or saved print job (Continued)

Windows 95, Windows 98, or Windows Me	PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, choose the Job Type. 4. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.
Windows 2000, Windows XP, or Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, choose the job type. 4. For proof print and saved print jobs, enter the name you want to give this job. For a secure print job, enter a numeric (4-digit) password to assign to this job.
Windows 2000 or Windows XP	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Layout tab, click the Advanced button. 4. Select the Job Type. 5. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.
Windows NT	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. Click the Advanced tab and select the Job Type under Document Options. 4. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, choose the job type. 4. For a secure print job, enter a 4-digit password to assign to this job. For proof print and saved print jobs, enter the name you want to give this job.

Printing secure jobs

To print your secure print jobs, specify the 4-digit password on the printer's front panel:

1. Scroll to the **Printable Pages Menu** using the **Down Arrow** key and press the **OK** key.
2. Scroll to **Secure Print Jobs** and press the **OK** key.
3. Scroll to the correct first digit of the password.

Note

If you entered fewer than four digits in the driver's **Password** field, enter zeros before your password so that there are four digits entered in the front panel. For example, if you entered **222** in the driver, enter **0222** in the front panel. You can use the **Back** key to move back to a previous digit. All jobs with this numeric password will print after you press the **OK** key for the fourth digit.

4. Press the **OK** key.
5. Repeat steps 3 and 4 for the second, third, and fourth digits.
6. If necessary, press the **Down Arrow** key to scroll to **Print**.
7. Press the **OK** key to print the job.

Printing saved jobs and proof jobs

To print a saved print job or the remaining copies of a proof print job, select the job name on the printer's front panel:

1. Scroll to the **Printable Pages Menu** using the **Down Arrow** key, then press the **OK** key.
2. Scroll to **Proof Print Jobs** or **Saved Print Jobs** and press the **OK** key.
3. Scroll until you find your job name. They are arranged alphabetically.
4. Press the **OK** key.
5. Scroll to **Print and Delete** or **Print and Save** and press the **OK** key.
6. Scroll to the desired number of copies and press the **OK** key to print the job. If your job is a proof job, it is automatically deleted after being printed.

Deleting saved jobs or proof jobs

To delete a saved print job or the remaining copies of a proof print job, select the job name on the printer's front panel:

1. Scroll to the **Printable Pages Menu** using the **Down Arrow** key, then press the **OK** key.
2. Scroll to **Proof Print Jobs** or **Saved Print Jobs** and press the **OK** key.
3. Scroll until you find your job name. They are arranged alphabetically.
4. Press the **OK** key.
5. Scroll to **Delete** and press the **OK** key to delete the job.

Separation pages

You can have the printer insert a *separation page* (a divider page or slipsheet) after a print job, between copies of a print job, or between individual pages of a print job. You can also specify the tray to use as the source for the separation pages.

Specifying separation pages

Operating System	Driver	Instructions
MacOS 8 / MacOS 9		<ol style="list-style-type: none"> 1. In the Print dialog box, click on General. 2. Select Advanced Media Options from the pull-down menu. 3. Select the location of the separation pages and the tray source.
MacOS X		<ol style="list-style-type: none"> 1. In the Print dialog box, select the Printer Features pull-down menu. 2. Select the Advanced Options tab and select Separation Pages.
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, select the location of the separation pages and the tray source.
Windows 2000, Windows XP, or Windows NT	PostScript PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, select the location of the separation pages and the tray source.
Windows 2000 or Windows XP	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. Click the Layout tab and click the Advanced button. 4. Under Document Options, select the location of the separation pages and the tray source.
Windows NT	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. Click the Advanced tab and under Document Options select the location of the separation pages and the tray source.

Printing multiple pages to a single sheet (N-up)


When printing a multiple-page document, you can choose to print more than one page on a single sheet of paper. You can choose to print one, two, four, six, nine, or 16 pages per sheet (per side if printing duplex).

Printing multiple pages on a single sheet of paper

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, click on General. 2. Select Layout from the pull-down menu, and then select the number of pages per sheet.
MacOS X	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, select the Layout pull-down menu. 2. Select a layout.
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click the More Layout Options button. 4. Choose the number of pages per sheet from the drop-down list. When you print more than one page on a sheet, you can also print a border around each page.
Windows 2000 or Windows XP	PostScript PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Layout tab, choose the number of pages per sheet from the drop-down list.
Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Advanced tab, under Document Options, select the desired Page Layout (N-up) Option.
Windows NT	PCL5e	Not supported
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click the More Layout Options button. 4. Choose the number of pages per sheet from the drop-down list. When you print more than one page on a sheet, you can also print a border around each page.


Booklet printing

If your printer has the duplexing feature set, you can print a document in the form of a small book. You can create booklets for any paper size that is supported for 2-sided (duplex) printing. The driver automatically reduces each page image and prints two pages per side. The pages are printed in the correct order so that you can fold and staple the pages to create a booklet.

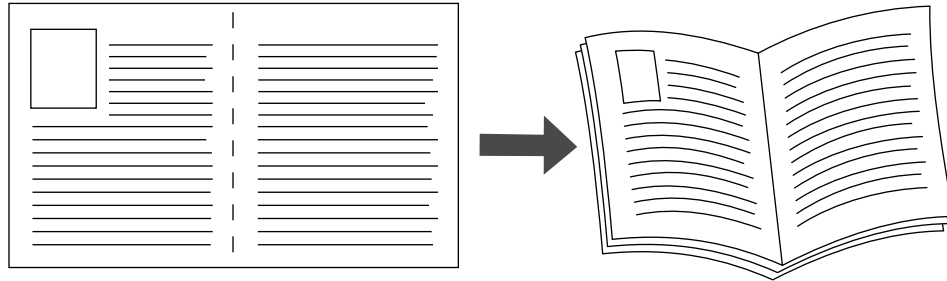

Creep and gutter

When you choose to print booklets, you can also specify the *creep* and *gutter* in the **Windows 95 / Windows 98 / Windows Me driver**. The gutter is the horizontal distance from the fold to the page image (in points). The creep is the distance that page images are shifted inward (in 10ths of a point); this compensates for the thickness of the folded paper, which otherwise would cause the inner page images to shift slightly outward.

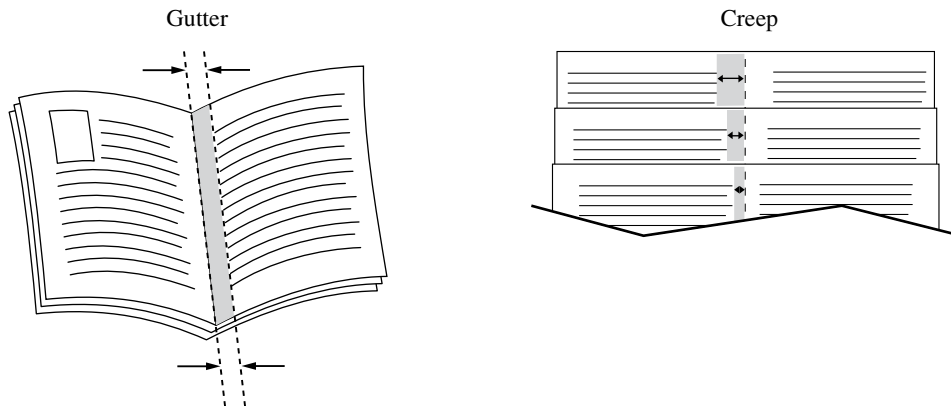

Specifying booklet printing

Operating System	Driver	Instructions
MacOS 8 / MacOS 9 or MacOS X	PostScript	Not supported.
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click More Layout Options. 4. Check Print Booklet Style option. You can also specify the creep and gutter.
Windows 2000 or Windows XP	PostScript PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Layout tab, choose Booklet from the Pages per Sheet drop-down list.
Windows NT	PostScript PCL5e	Not supported
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click More Layout Options. 4. Check Print Booklet Style in the More Layout Options box. You can also specify the creep and gutter in this box.

Negative and mirror images

You can print your pages as a negative image (reverses the light and dark areas in your printed image) and/or mirror image (flips images horizontally on pages when printed).


To select negative or mirror images in a supported driver:

Specifying negative and mirror images

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Page Setup 2. Choose PostScript Options from the pull-down menu, and then select Invert Image (to print a negative image) or Flip Horizontal (to print a mirror image).
Windows 95, Windows 98, or Windows Me	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click More Layout Options. 4. Select Print as a Negative Image and/or Print as a Mirror Image.
Windows 95, Windows 98, or Windows Me	PCL5e PCL6	Not supported
Windows 2000 or Windows XP	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. From the Layout tab, click Advanced. 4. Under Document Options and PostScript Options, select either Yes or No for Mirrored Output and Negative Output.
Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button and click the Advanced tab. 3. Under Document Options and PostScript Options, select either Yes or No for Mirrored Output and Negative Output.
Windows 2000, Windows XP, or Windows NT	PCL5e PCL6	Not supported

Scaling

You can reduce or enlarge your page images when they are printed. You select a scaling value between 25 and 400 percent. The default is 100 percent.

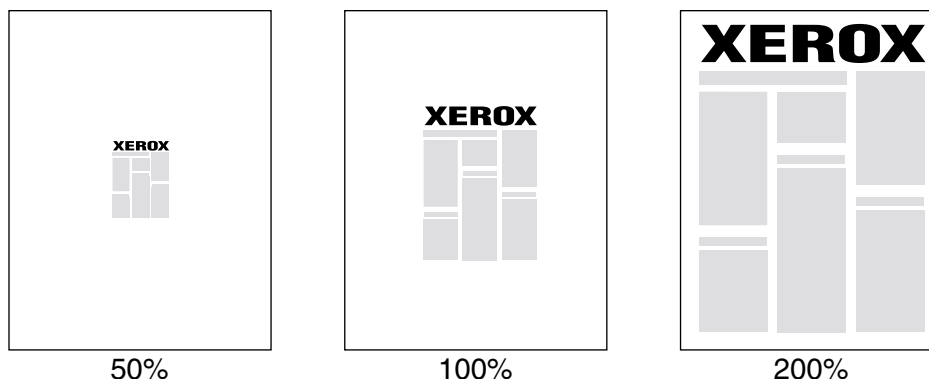

Specifying scaling

Operating System	Driver	Instructions
MacOS 8 / MacOS 9 MacOS X		<ol style="list-style-type: none"> From the File menu, select Page Setup Specify the percentage in the box after Scaling.
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> From the File menu, select Print. Click the Properties button. On the Setup tab, click More Layout Options, Specify the percentage to scale in the Percentage box.
Windows 2000 or Windows XP	PostScript PCL5e	<ol style="list-style-type: none"> From the File menu, select Print. Click the Properties button. From the Layout tab, click Advanced. In the box under Graphic, select the desired percentage for Scaling.
Windows NT	PostScript PCL5e	<ol style="list-style-type: none"> From the File menu, select Print. Click the Properties button and click the Advanced tab. Under Graphic, select the desired percentage for Scaling.
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> From the File menu, select Print. Click the Properties button. On the Setup tab, click More Layout Options, Specify the percentage to scale in the Percentage box.

Auto Fit

When the printer uses a paper size that is different from the size specified in your driver, the Auto Fit feature enlarges or reduces the print image to fit the paper size it prints on. If this feature is turned off and the paper is not the same size as the print image, only a portion of the image will print, or the whole image prints on only a portion of the paper.


The default value for this feature is on.

Turning off Auto Fit

Operating System	Driver	Instructions
MacOS 8 / MacOS 9		<ol style="list-style-type: none"> 1. In the Print dialog box, click on General. 2. Select Advanced Media Options from the pull-down menu, then select whether to have Auto Fit on or off.
MacOS X		<ol style="list-style-type: none"> 1. In the Print dialog box, select the Printer Features pull-down menu. 2. Select the Advanced Options tab, then select whether to have Auto Fit on or off.
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	Not supported
Windows 2000, Windows XP, or Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Paper/Quality tab, select Choose Specific Tray. 4. Clear the Auto-Fit checkbox.
Windows 2000, Windows XP, or Windows NT	PCL5e PCL6	Not supported

Watermarks

A watermark is text (independent of that provided by the printing application) that is printed on the first page or every page of the document. For example, terms like Draft, Confidential, Date, Version, that you might stamp on a paper before distribution, can be inserted with a watermark.

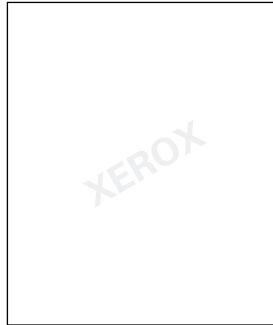

You can create a watermark or edit an existing watermark's text, location, and angle. Using the Windows driver, you can also choose to print the watermark only on the first page, print the watermark in the background, or print the text of the watermark as an outline (instead of filled text).

Note

Not all applications support watermark printing.

Selecting, creating, and editing watermarks

Operating System	Driver	Instructions
MacOS 8 / MacOS 9 or MacOS X		Not supported
Windows 95, Windows 98, or Windows Me	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click More Layout Options. 4. Click Watermark to display the Watermarks dialog box.
Windows 95, Windows 98, or Windows Me	PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button, and then click the Watermarks tab.
Windows 2000 or Windows XP	PostScript PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. From the Layout tab, click Advanced. 4. In the box under Document Options and Printer Features, click Modify, then select the desired watermark in the Modify Watermarks dialog box.
Windows NT	PostScript	Not supported

Selecting, creating, and editing watermarks (Continued)

Windows NT	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. From the Layout tab, click Advanced. 4. In the box under Document Options, click Watermark. 5. Select the desired watermark in the Watermark Editor dialog box.
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button, and then click the Watermarks tab.

Image smoothing

Image smoothing blends adjacent black and gray areas in low-resolution images for smoother edge transitions. For example, use image smoothing to improve the appearance of a 72 dpi image downloaded from the World Wide Web. Image smoothing is not recommended for 300 dpi or higher resolution images.

To select image smoothing in a supported driver:

Image smoothing

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, click on General. 2. Select Advanced Options from the pull-down menu, then select whether to have Image Smoothing on or off.
MacOS X	PostScript	<ol style="list-style-type: none"> 1. In the Print dialog box, select the Printer Features pull-down menu. 2. Select whether to have Image Smoothing on or off.
Windows 95, Windows 98, or Windows Me	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab, click More Layout Options. 4. Click Image Smoothing checkbox.
Windows 95, Windows 98, or Windows Me	PCL5e PCL6	Not supported
Windows 2000 or Windows XP	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. On the Layout tab, click the Advanced button. 3. In the box under Document Options and Printer Features, select either On or Off for Image Smoothing.
Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Advanced tab under Document Options and Printer Features, select either On or Off for Image Smoothing.
Windows 2000, Windows XP, or Windows NT	PCL5e PCL6	Not supported

Custom size paper



In addition to the wide variety of standard paper sizes available for this printer, you can use custom size paper. For a list of paper sizes, see the *Supported Papers* section of the *Trays and Paper Guide* on the **Interactive Documentation CD-ROM**.

To print on custom size paper:

1. Load the paper in a tray or in the Multi-Purpose Tray. (Custom sized envelopes and post cards can be loaded in the envelope feeder.) For more information, see the *Trays* section of the *Trays and Paper Guide* on the **Interactive Documentation CD-ROM**.

Top view:

A. Simplex printing, B. Duplex printing

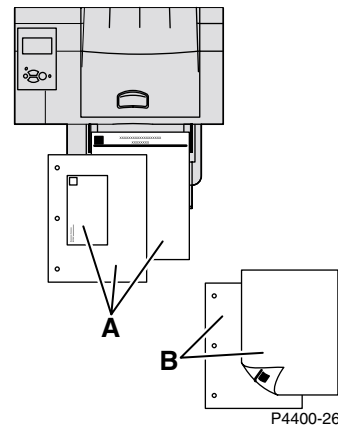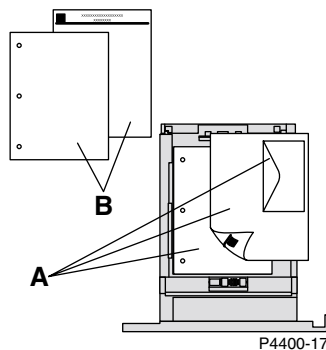

2. When the front panel prompts you to confirm the type and size of paper:
For Tray 1, 2, or 3:
 - a. Scroll to the correct paper type and press the **OK** key to save your selection.
 - b. To set the tray for custom size paper and specify the dimensions, on the front panel, with **Menus** highlighted, press the **OK** key.
 - c. Scroll to **Printer Setup Menu** by pressing the **Down Arrow** key and press the **OK** key.
 - d. Scroll to **Tray Setup Menu** and press the **OK** key.
 - e. Scroll to **Tray # Setup Menu** (where # is the number of the tray) and press the **OK** key.
 - f. If you don't see a selection for **Set Custom X**, scroll to **Custom Size** and press the **OK** key to change **Custom Size** to **On**.
 - g. Scroll to **Set Custom X** and press the **OK** key.
 - h. Press the **Down Arrow** or **Up Arrow** key to scroll to the value for **X**, and then press the **OK** key. (The X value is the measurement from the left to the right of the paper in the tray.)
 - i. Scroll to **Set Custom Y** and press the **OK** key.
 - j. Press the **Down Arrow** or **Up Arrow** key to scroll to the value for **Y**, and then press the **OK** key. (The Y value is the measurement from the front to the back of the paper in the tray.)

For the Multi-Purpose Tray:

- a. Scroll to **Change Paper Type** by pressing the **Down Arrow** key and press the **OK** key.
 - b. Scroll to the correct paper type and press the **OK** key to save your selection.
 - c. Scroll to **Change Paper Size** and press the **OK** key.
 - d. Scroll to **Custom** and press the **OK** key.
 - e. Scroll to **Set Custom X** and press the **OK** key.
 - f. Press the **Down Arrow** or **Up Arrow** key to scroll to the value for **X**, and then press the **OK** key. (The X value is the measurement from the left to the right of the paper in the tray.)
 - g. Scroll to **Set Custom Y** and press the **OK** key.
 - h. Press the **Down Arrow** or **Up Arrow** key to scroll to the value for **Y**, and then press the **OK** key. (The Y value is the measurement from the front to the back of the paper in the tray.)
3. Select the custom size in the printer driver.

Selecting custom size paper

Operating System	Driver	Instructions
MacOS 8 / MacOS 9	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. In the Page Setup dialog box, select the Custom Page Sizes pull-down menu. 3. Press New to enter a new custom page size. A dialog box appears where you can enter the width and height, margins, and name of the custom page size.
MacOS X	PostScript	Not supported
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab: <ul style="list-style-type: none"> ■ If you select a specific tray and the tray displays Custom to indicate that it has custom size paper, click the Custom button to enter the dimensions of the custom size paper in the Width and Height boxes. ■ If you select Automatic for the paper source and select Custom Size for the paper size, click the Custom button to enter the width and height values of the desired custom size paper in the Width and Height boxes. The values for width and height are initially 0. If you previously entered information in the boxes, the values are automatically entered. ■ If a tray has paper with the width and height values you entered, the job is printed on that paper. If a tray doesn't have paper with the values, it prompts you to load that paper.

Selecting custom size paper (Continued)

Windows 2000, Windows XP, or Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Paper/Quality tab: <ul style="list-style-type: none"> ■ If you select Choose Specific Tray, you can select the tray containing the custom size paper. ■ If you select Automatic, you can select your custom size from the Paper Size drop-down list. ■ Click the My Custom Sizes button and highlight the custom size in the Current Selection list. The Name, Width, and Height boxes display the details about the highlighted custom size and the sample image changes to represent a scaled version of the custom size. ■ To create a new custom size: <ol style="list-style-type: none"> a. Click New. b. Enter the new name in the Name box. c. Enter the dimensions in the Width and Height boxes. The sample image changes to represent a scaled version of the new custom size. (Select Show Metric Units to change from inches to millimeters.) d. Click Save to add the new size to the list. Click Cancel to exit without saving the new custom size. e. To exit, click Close. ■ The My Custom Sizes box lists existing custom sizes that are supported by the current printer. Since these custom sizes are saved in your computer's operating system, they are available for you to select in your applications. ■ If you create a custom size in certain applications, the driver lists the custom size automatically.
Windows 2000, Windows XP, or Windows NT	PCL5e	Not supported in driver; set custom sizes within the application.

Selecting custom size paper (Continued)

Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Setup tab: <ul style="list-style-type: none"> ■ If you select a specific tray and the tray displays Custom to indicate that it has custom size paper, click the Custom button to enter the dimensions of the custom size paper in the Width and Height boxes. ■ If you select Automatic for the paper source and select Custom Size for the paper size, click the Custom button to enter the width and height values of the desired custom size paper in the Width and Height boxes. The values for width and height are initially 0. If you previously entered information in the boxes, the values are automatically entered. ■ If a tray has paper with the width and height values you entered, the job is printed on that paper. If a tray doesn't have paper with the values, it prompts you to load that paper.
--	------	---

Cover pages

A cover page is the first or last page of a document. This printer allows you to choose a different paper source for the cover than for the body of a document. For instance, you can use your company letterhead for the first page of a document. You can also use card stock for the first and last pages of a report.

- You can use any paper tray as the source for cover pages.
- Make sure that the cover page is the same size as the paper used for the rest of your pages. If you specify a different size in the driver than the tray you select as a cover pages source, your cover(s) print on the same paper as the rest of your document.

Cover page choices

- **None** - Prints the first and last pages of your document using the same paper as the rest of your document.
- **First Page Only** - Prints the first page of your document from a different tray than the rest.
- **First and Last Pages** - Prints the first and last pages of your document from a different tray than the rest.

If you select **First Page Only** or **First and Last** and you select 2-sided printing, the first two pages of the job print on the front cover.

If you select **First and Last Pages** and you select 2-sided printing, both the first two pages and last two pages (for a document with an even number of pages) of the job print on the front and back cover pages.

Note

For a blank back cover, you must include a blank last page in your document.

Selecting cover pages

Operating System	Driver	Instructions
MacOS 8 / MacOS 9 or MacOS X	PostScript	Not supported
Windows 95, Windows 98, or Windows Me	PostScript PCL5e PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, select First Page Only or First and Last Pages. 4. Select the tray to use for the covers from the Source drop-down list.
Windows 2000 or Windows XP	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Paper/Quality tab under Cover Pages, select First Page Only or First & Last Pages. 4. Select the tray to use for the covers from the Source drop-down list.
Windows NT	PostScript	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Advanced tab under Printer Features, select a Cover Page and Cover Page Source.
Windows 2000 or Windows XP	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Layout tab, click the Advanced button. 4. Under Document Options, select Cover Page options.
Windows NT	PCL5e	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Advanced tab under Printer Features, select Cover Page options.
Windows 2000, Windows XP, or Windows NT	PCL6	<ol style="list-style-type: none"> 1. From the File menu, select Print. 2. Click the Properties button. 3. On the Output Options tab, select First Page Only or First and Last Pages. 4. Select the tray to use for the covers from the Source drop-down list.

Printer Settings

Printing the Startup Page

By default the printer produces a Startup Page each time the printer is turned on or reset. You can disable the automatic printing of the Startup Page and later print it from the Printable Pages menu.

There are two methods for turning on/off the Startup Page:

- Select from the printer's front panel.
- Use CentreWare Internet Services (IS) software.

To turn on/off the automatic printing of the Startup Page from the printer's front panel:

1. With **Menus** highlighted, press the **OK** key.
2. Scroll to **Printer Setup Menu** using the **Up Arrow** or **Down Arrow** key and press the **OK** key.
3. Scroll to **Startup Page**. The end of the line also displays the setting (**On** or **Off**).
4. To change the setting, press the **OK** key.

To turn on/off the automatic printing of the Startup Page using CentreWare IS software:

1. From your printer's Internet Services home page, click **Properties**.
2. On the left side of the **Properties** page in CentreWare IS, click **Printer Defaults**.
3. If desired, change the setting for **Print Startup Page** (under **User Preferences** on the **Printer Defaults** page).
4. Click the **Save Changes** button on the bottom of the page.

To print the Startup Page at the front panel:

1. Scroll to the **Printable Pages Menu** using the **Down Arrow** or **Up Arrow** key and press the **OK** key.
2. Scroll to the **Print Startup Page** using the **Down Arrow** or **Up Arrow** key and press the **OK** key to print.

Power Saver

The printer enters a Power Saver low-energy consumption mode after a predefined period of time since its last activity. In this mode, most printer electrical systems are shut down. When a print job is sent to the printer, it wakes up the printer. You can also wake the printer by pressing the **OK** key on the front panel.

If you find that the printer is going into Power Saver mode too often and you do not want to wait while the printer wakes up, you can extend the length of time before the printer goes into Power Saver mode. Change the timeout on the front panel as follows:

1. With **Menus** highlighted, press the **OK** key.
2. Scroll through the menu to **Printer Setup Menu** using the **Down Arrow** key and press the **OK** key.
3. Scroll through the menu to **Set Power Saver Timeout** using the **Down Arrow** key and press the **OK** key.
4. Select a Power Saver timeout value. Select a higher value if you want to extend the length of time before the printer goes into Power Saver mode.
5. Press the **OK** key.

To turn off the Power Saver feature, use the following procedure:

1. With **Menus** highlighted, press the **OK** key.
2. Scroll through the menu to the **Printer Setup Menu** and press the **OK** key.
3. Scroll to the **Reset Printer Menu** using the **Down Arrow** key and press the **OK** key.
4. Scroll through the menu to **Power Saver** using the **Down Arrow** key.
5. Press the **OK** key to turn off.

Protected mode for the front panel menus

You can put the printer into “protected mode” to prevent users from changing printer settings that may impact the prints of other users from the front panel. Instead, users can select printing features through the printer drivers only. In protected mode, users can access general menus that can improve their print quality and direct them to user features, while locking the menus and items in menus that the system administrator uses to manage the printer.

To enter or exit protected mode, use CentreWare IS software:

1. From your printer’s Internet Services home page, click **Properties**.
2. On the left side of the **Properties** page in CentreWare IS, click **General** and then click **Printer Defaults**.
3. If desired, change the setting for **Front Panel Menus** (under **User Preferences** on the **Printer Defaults** page).
 - Select **On** to have all menus available.
 - Select **Off** to lock all menu items that change printer setup values.
4. Click **Save Changes** on the bottom of the page.

Load paper timeout

When the tray selection is set to **Automatic** but the printer does not have the selected type and size loaded, the front panel prompts you to load the type and size required in the Multi-Purpose Tray. If you do not load the requested paper within the load paper timeout, the printer picks paper from the default tray.

To change the load paper timeout from the printer's front panel:

1. With **Menus** highlighted, press the **OK** key.
2. Scroll to **Printer Setup Menu** by pressing the **Up Arrow** or **Down Arrow** key.
3. Press the **OK** key.
4. Scroll to **Set Load Paper Timeout**.
5. Press the **OK** key.
6. Scroll through the list of values until your desired timeout appears. The values (**None**, **1 Minute**, **3 Minutes**, **5 Minutes**, or **10 Minutes**, **1 Hour** or **24 Hours**), indicate the length of time you want the printer to wait for you to load paper before printing. If you select a value of **None**, the printer does not wait for paper to be inserted and uses the paper in the default tray immediately.
7. Press the **OK** key.

To change the load paper timeout using CentreWare IS software:

1. From your printer's Internet Services home page, click **Properties**.
2. On the left side of the **Properties** page in CentreWare IS, click **General** and then click **Printer Defaults**.
3. The setting for **Load Paper Timeout** is under **Timeout Settings** on the **Printer Defaults** page. Select one of the following choices: **None**, **1 Minute**, **3 Minutes**, **5 Minutes**, or **10 Minutes**, **1 Hour** or **24 Hours**; if you select a value of **None**, the printer times out immediately.
4. Click the **Save Changes** button on the bottom of the page.

Front panel intensity

To make the front panel text more readable, you can adjust the intensity of the front panel's background lighting:

1. On the front panel, with **Menus** highlighted, press the **OK** key.
2. Scroll to **Printer Setup Menu** by pressing the **Up Arrow** or **Down Arrow** key.
3. Press the **OK** key.
4. Scroll to **Set Front Panel Intensity**.
5. Press the **OK** key.
6. Scroll until the desired front panel intensity is displayed. The intensity values range from **0** (no back ground light) to **10** (brightest background light).
7. Press the **OK** key.

Front panel contrast

To make the front panel text more readable, you can adjust the contrast between the text and the background:

1. On the front panel, with **Menus** highlighted, press the **OK** key.
2. Scroll to **Printer Setup Menu** by pressing the **Up Arrow** or **Down Arrow** key.
3. Press the **OK** key.
4. Scroll to **Set Front Panel Contrast**.
5. Press the **OK** key.
6. Scroll the value until you achieve the desired contrast between the text and the background. The values range from **1** to **10**.
7. Press the **OK** key.

Intelligent Ready mode

Intelligent Ready mode is an automated system that monitors the printer's usage and warms up the printer when you are most likely to need it and puts it into Power Saver mode when you use it the least.

To turn Intelligent Ready mode on or off from the printer's front panel:

1. With **Menus** highlighted, press the **OK** key.
2. Scroll through the menu to **Printer Setup Menu** using the **Up Arrow** or **Down Arrow** key.
3. Press the **OK** key.
4. Scroll through the menu to **Intelligent Ready** using the **Up Arrow** or **Down Arrow** key.

To change the setting, press the **OK** key.

To select Intelligent Ready mode or schedule warmup/standby settings using CentreWare IS software:

1. From your printer's Internet Services home page, click **Properties**.
2. On the left side of the **Properties** page in CentreWare IS, click **General** and then click **Warmup**.
3. For **Warmup Mode**, select either **Intelligent Ready** or **Scheduled** (if you want to specify the warmup/standby settings for each day).
4. If you selected **Scheduled** in step 3, make selections for each day's warmup setting and standby setting.
5. Click the **Save Changes** button on the bottom of the page.

Note

Although the front panel selections only enable you to turn Intelligent Ready mode on or off, CentreWare IS enables you to specify particular printer warmup times.

Front panel language

To change the language used for the text on the front panel, CentreWare IS, and many of the printable pages:

1. On the front panel, with **Menus** highlighted, press the **OK** key.
2. Scroll to **Printer Setup Menu** by pressing the **Up Arrow** or **Down Arrow** key and press the **OK** key.
3. Scroll to **Set Front Panel Language** and press the **OK** key.
4. Scroll to the desired language and press the **OK** key.

Fonts

Your printer uses the following types of fonts:

- Resident fonts
- Fonts pre-loaded or downloaded onto the printer's optional hard drive
- Fonts downloaded onto the printer's optional Flash DIMM
- Fonts downloaded into printer memory
- Fonts downloaded with your print job from the application

Adobe Type Manager (ATM) software helps your computer display these fonts on your computer screen as they will appear in your prints. If you don't already have ATM on your computer, install it from the printer's CD-ROM. Also, install the printer's screen fonts for your computer from the ATM folder.

Resident typefaces (PostScript)

Printer-resident fonts are always available for printing. All printer configurations are shipped with 39 PostScript resident Roman fonts. Additionally, 97 Roman fonts are pre-loaded on the optional internal hard drive. You can print a sample of the available PostScript fonts at the front panel.

Resident typefaces (PCL5e/6)

For PCL5e/6 printing, the printer provides a total of 81 resident PCL fonts, such as Courier, Times, Univers, Arial, CG Times, CG Omega, Times New Roman, and Helvetica typefaces in medium, bold, italic medium, and italic bold. You can print a sample of the available PCL5e/6 fonts at the front panel.

Printing a sample of available fonts

Listing the fonts from a Macintosh

Use the *Apple Printer Utility* to list the fonts available on the printer.

1. If you don't already have the *Apple Printer Utility* on your computer, install it from the printer's CD-ROM.
2. Start the *Apple Printer Utility* by double-clicking the icon (in the *PhaserTools* folder on your computer's hard disk).
3. In the **Printer Selector** dialog box:
 - a. Under **AppleTalk Zones**, select your printer's zone.
 - b. Under **Printers**, select your Phaser 4400 Laser Printer.
 - c. Click **Open Printer**.
4. From the **File** menu, select **Print Font Samples**.

Listing the fonts from a PC

To list the fonts available on the printer, use the font download utility on the Xerox web site at: www.xerox.com/officeprinting/support.

Listing the fonts from your printer's front panel

You can print both a PCL font list and a PostScript font list from the front panel:

1. On the front panel, scroll to **Printable Pages Menu** by pressing the **Up Arrow** or **Down Arrow** key and press the **OK** key.
2. Scroll to either **Print PostScript Font List** or to **Print PCL Font List** and press the **OK** key.

Listing the fonts from CentreWare IS

You can print font samples from CentreWare IS if you have a hard drive on your printer.

1. Enter the printer's IP address in your browser to open CentreWare IS.
2. Click the **Print** tab.
3. Click **Print Help Pages**.
4. Select either **PostScript Font List** or **PCL Font List**. You can only select one at a time.
5. Click the button to start to print.

Downloading fonts

To supplement the resident fonts (which are always available for printing), downloadable fonts can be sent from your computer and be stored in the printer's memory or on the printer's optional hard drive. Adding more printer memory expands the number of fonts that can be stored in your printer's memory at once. See the *Supplies* section in the *Support Guide* on the **Interactive Documentation CD-ROM** or log on to www.xerox.com/officeprinting/4400supplies for part numbers of the memory.

Note

If you turn the printer off, the fonts you download to memory are wiped out. You must download them again when you turn the printer on. Fonts downloaded to the optional hard drive or Flash DIMM are stored permanently.

Before printing, make sure that the fonts specified in your document are installed in the printer or are set up to download correctly. If you request a font in an application that is not resident in the printer, is not correctly installed, or is not downloaded from the application sending the print job, the text is printed in the nearest matching font that is available when using PCL, or it is printed in the default font when using PostScript.

Downloadable PostScript fonts

The printer accepts the following (and other) downloadable PostScript fonts:

- Type 1
- Type 3
 - Adobe
 - Agfa
 - Bitstream
 - Microsoft
 - Apple
- TrueType (scalable to any point size; looks the same on-screen and printed).

Downloadable PCL fonts

The printer accepts the following (and other) downloadable PCL fonts:

- Bitmap (Format 0)
- TrueType (Format 15)
- Intellifont (Format 10) — Intellifonts cannot be loaded to the internal hard drive or to the Flash DIMM.

Downloading fonts from a Macintosh

Use the *Apple Printer Utility* to download fonts to the printer.

1. If you don't already have the *Apple Printer Utility* on your computer, install it from the printer's CD-ROM.
2. Start the *Apple Printer Utility* by double-clicking the icon (in the *PhaserTools* folder on your computer's hard disk).
3. In the **Printer Selector** dialog box:
 - a. Under **AppleTalk Zones**, select your printer's zone.
 - b. Under **Printers**, select your printer.
 - c. Click the **Open Printer** button.
4. In the printer's dialog box, click the arrow next to **Printer Preferences**.
5. Click the arrow next to **Fonts** to display the list of installed fonts and their locations.
6. Click **Add**.
7. In the dialog box, select the folder containing the font you want to download, select the font, and click **Add**. The font is listed as ready to download.

Note

To add all of the fonts in the folder to the list of fonts to download, click the **Add All** button. If you decide not to download a font, highlight the font in the list of fonts to download and click the **Remove** button.

8. For **Destination**, select the download location: either the printer's memory or the hard disk.
9. To download the fonts in the list, click the **Send** button.

Note

To remove downloaded fonts from the printer, follow steps 2 through 5, highlight the font in the list under **Fonts** (in the printer's dialog box), and then click the **Remove** button.

Downloading fonts from a PC

To list the fonts available on the printer, use the font download utility on the Xerox web site at: www.xerox.com/officeprinting/support.

Index

Numerics

500-Sheet Stacker
 location 3
550-sheet tray
 location 3
600x600 dpi 8

A

Auto Fit
 driver selections 20
 overview 20

B

base configuration 1
booklet printing
 driver selections 17
 overview 16

C

components of printer 1
cover pages
 driver selections 29
 overview 28
custom paper
 driver selections 25
 overview 24

D

downloading fonts 37
 Macintosh 38
 PC 38
draft mode 8
driver features 7

driver selections
 Auto Fit 20
 booklet printing 17
 cover pages 29
 custom paper 25
 image smoothing 23
 mirror images 18
 multiple pages to a page 15
 negative images 18
 print quality 9
 proof print 11
 saved print 11
 scaling 19
 secure print 11
 separation pages 14
 watermarks 21
duplex unit
 location 4

E

enabling/disabling the Startup Page 30
envelope feeder
 location 3
error messages 6
Ethernet UTP connector
 location 2

F

fax friendly black 8
features
 driver 7
 front panel 6
font sampler
 Macintosh 35
fonts
 downloading 37
 listing 36
 printing sampler 35
 TrueType 37

- front cover release
 - location 1
- front panel
 - adjusting contrast 33
 - adjusting intensity 32
 - description 5
 - displaying errors 6
 - location 1
 - menus protected mode 31
- front panel contrast 33
- front panel prompts
 - custom paper 24
- front view
 - base configuration 1
- fuser cartridge
 - location 2

I

- image smoothing
 - driver selections 23
 - overview 23
- information on front panel 6
- intelligent ready mode 33
- internal components 2

L

- list of available fonts
 - printing 35
- listing fonts 36
- load paper timeout 32

M

- Macintosh
 - printing font sampler 35
- menu map 6
- mirror images
 - driver selections 18
 - overview 18
- modes
 - print quality 8
- multiple pages to a page
 - driver selections 15
 - overview 15
- Multi-Purpose Tray
 - location 1
- Multi-Purpose Tray extension 1

N

- negative images
 - driver selections 18
 - overview 18
- N-up 15

O

- options 3

P

- paper exit slot 1
- paper level gauge 1
- parallel connector
 - location 2
- PCL typefaces 35
- PostScript typefaces 35
- power cord receptacle
 - location 2
- Power Saver 31
- power switch
 - location 1
- print cartridge
 - location 2
- print quality
 - driver selections 9
 - modes 8
- printable pages 6
- printer components 1
- printer settings 30
- proof print
 - driver selections 11
- proof prints
 - overview 11
- protected mode for front panel menus 31

Q

- quality of print 8

R

- rear cover
 - location 2
- rear cover release
 - location 2
- rear view
 - base configuration 2

S

- saved print
 - driver selections 11
- saved prints
 - overview 11
- scaling
 - driver selections 19
 - overview 19
- secure print
 - driver selections 11
- secure prints
 - overview 11
- separation pages
 - driver selections 14
 - overview 14
- setting
 - front panel contrast 33
 - front panel intensity 32
- Standard Output Tray
 - location 1
- Startup Page
 - enable or disable 30

T

- tray
 - location 3
- Tray 1
 - location 1
- True 1200x1200 dpi 8
- TrueType fonts 37
- typefaces
 - Central European 35
 - resident PCL5e 35
 - resident PostScript 35

U

- USB connector
 - location 2

W

- watermarks
 - driver selections 21
 - overview 21
- web sites
 - ordering options 3
 - supplies 37