




5

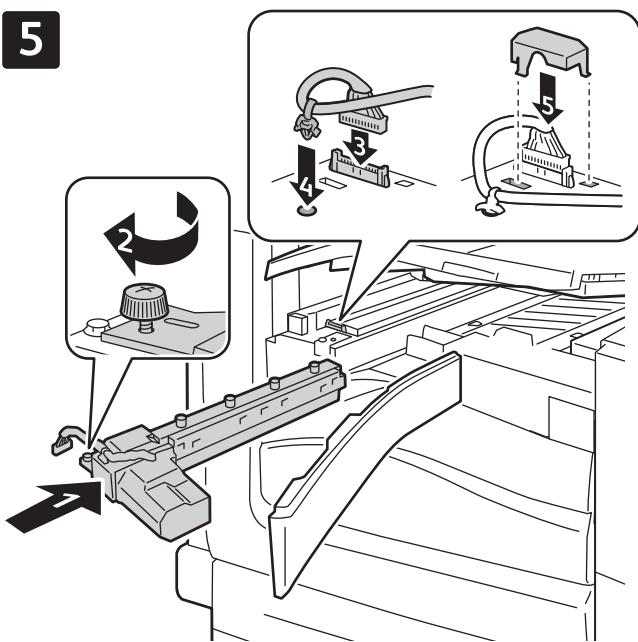


6

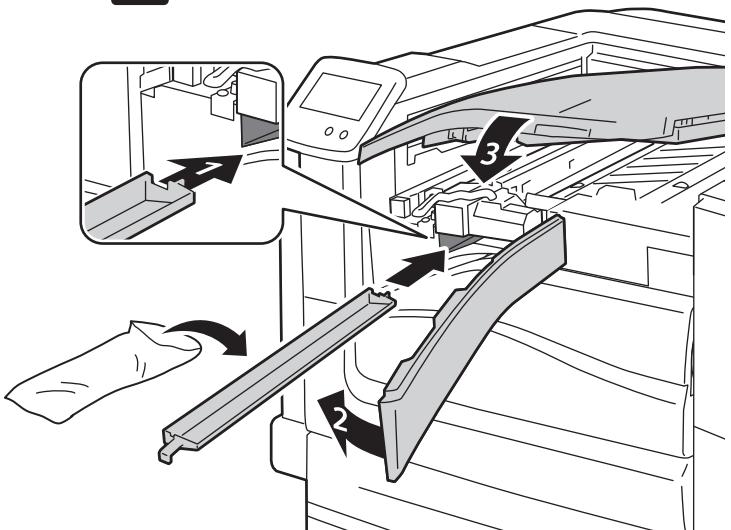

7

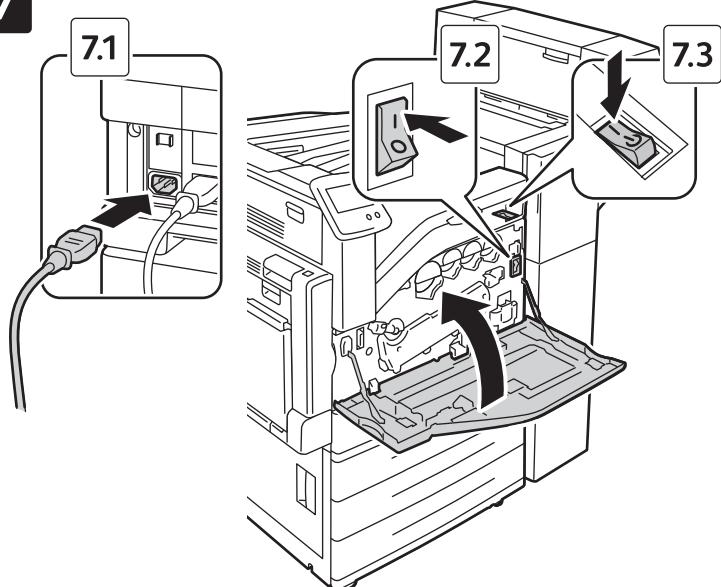

8

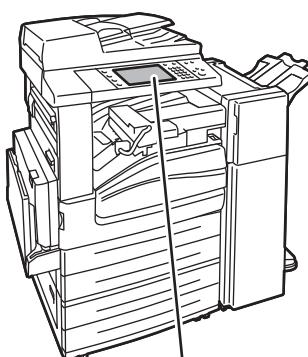

Choose Hole Punch Setting  
 Sélectionner le paramètre de perforation  
 Scegliere impostazione Perforatura  
 Lochereinstellung wählen  
 Elija la configuración de perforación  
 Escolha a configuração do furador  
 Perforatie-instelling kiezen  
 Välj hålstaninställning  
 Velg innstilling for hulling  
 Vælg hulningsindstilling  
 Valitse rei'itysasetus  
 Выбрать настройку перфорации  
 Zvolte nastavení děrování  
 Wybierz ustawienie dziurkaczka  
 Lyukasztási beállítás megadása  
 Delik Delme Ayarını Seç  
 Επιλογή ρύθμισης διάτρησης  
 选择打孔设置  
 選擇打孔設定  
 천공 설정 선택