











 











 


 
Xerox® WorkCentre® 7970/7970i



 




 





 


Printer Symbols





Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.
	Do not burn the waste cartridge.
	Pinch Hazard: To avoid personal injury, use caution in this area.

Symbol	Description
	<p>Pinch Hazard: To avoid personal injury, use caution in this area.</p>
	<p>Do not forcefully remove the paper.</p>
	<p>Hot surface. Wait for the indicated time before handling.</p>
	<p>On</p>
	<p>Off</p>
	<p>Standby</p>
	<p>Do not use paper attached with staples or any form of binding clip.</p>
	<p>Do not use folded, creased, curled, or wrinkled paper.</p>
	<p>Do not load or use inkjet paper.</p>
	<p>Do not reload paper previously printed on or used.</p>
	<p>Do not use postcards.</p>
	<p>Do not use envelopes.</p>
	<p>Do not copy money.</p>

Symbol	Description
	Add paper or media.
	Paper Jam
	Lock
	Unlock
	Paper Clip
	Cooling
	Elapsed Time
	Supply Paper
	1-Sided Original
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.

Symbol	Description
	Load labels face down.
	USB Universal Serial Bus
	LAN Local Area Network
	Telephone Line
	Weight
	Start Button
	Stop Button
	Pause Printing Button
	Log In/Out Button
	Help Button
	Services Home Button
	Services Button
	Job Status Button
	Printer Status Button
	Language Button
	Power Saver Button

Symbol	Description
AC	Clear All Button
 The symbol consists of a stylized telephone handset on the left, followed by two vertical bars on the right, representing a pause function.	Dial Pause Button
 The symbol is the universal recycling symbol, which is a triangle formed by three chasing arrows.	This item can be recycled.

