



imaginative solutions.

# Instructions for Rebuilding

Imation Matchprint™ Professional Server

## Contents

A	Required Software for Windows NT® Rebuild .....	2
B	Installation Requirement.....	2
C	Windows NT Load.....	3
D	Windows NT Setup.....	4
E	Partition Remaining Free Space.....	5
F	Install Microsoft Windows NT® Service Pack 6a.....	5
G	Install Video Driver .....	6
H	Install Ethernet Software.....	7
I	Install Services for Macintosh .....	7
J	Install Microsoft TCP/IP Printing.....	8
K	Re-Install Service Pack 6a .....	8
L	Install Option Pack 4.0.....	8

## **A Required Software for Windows NT® Rebuild**

### **Windows NT® Setup Disks 1, 2 and 3**

Two jewel cases containing the following four CD-ROMs:

**MicroSoft Windows NT® Server**

**MicroSoft® Front Page 98**

**MicroSoft Windows NT® 4.0 Option Pack**

**MicroSoft Windows NT® Service Pack 6a**

**adaptec MicroSoft Windows NT®, Version d3.5 diskette**

**International ATI Installation CD, Version 105**

**Intel® Desktop Board D815EEA**

## **B Installation Requirement**

To complete these procedures, the **Imation Matchprint™ Professional Server** must be installed on a LAN network with access to the internet.

## C Windows NT Load

1. Before powering on the system, insert **Windows NT® Setup Disk 1** into the drive.
2. Turn on the system.
3. Follow the prompts and insert **Windows NT® Setup Disk 2** when requested.

**Note:** This is a setup procedure, not a repair. Follow the prompts accordingly.

4. Continue to follow the prompts. Always select the default unless other information is stated here:

**Note:** Only ESDI/IDE devices are detected by NT.

- a. When ..... appears, select **S**pecific
- b. Insert **adaptec disk d3.5**
- c. Choose Adaptec ULTRA 160 Family PCI SCSI Controller (NT 4.0)
- d. After loading, select Enter to return to setup.
- e. Insert **Windows NT® Setup Disk 3**.
- f. Page down and select F8 to agree to license
- g. **N**ew load (not upgrade)
- h. Press Enter.
- i. **D**elete Partition – OK
- j. **L** to Delete
- k. Use unpartitioned drive (or....?)
- l. File System Select NTFS
- m. If 9 G drive is unpartitioned, select 4096 for partition size.
- n. Select **F**ormat NTFS
- o. Choose **WIN NT**
- p. Test drive.
- q. Remove **Windows NT® Setup Disk 3**.
- r. Remove **adaptec** CD from drive.
- s. **R**estart when prompted.

## **D Windows NT Setup**

1. Insert Microsoft Windows NT® Server CD-ROM.
2. Select **Next**.
3. **Name:** Enter any name you want. For example, the department name.  
**Org:** Enter your company name.
4. Enter the **CD-Key** number located on the back of the CD case.
5. Set server for **5 Concurrent Connections**.
6. Enter the computer location. For example: IMPS\_DFE3B
7. Select **Stand-Alone Server**.
8. Administrator password leave blank.
9. **No** to creating emergency disk.
10. Uncheck **Accessories Options** (or set to customer preference)
11. Select **Finish Setup**.
12. Setup time zone.
13. Setup Display as 640 x 480 and apply.
14. Remove CD.
15. **Restart** when prompted.

## **E Partition Remaining Free Space**

1. Go to **Start > Program > Administrator Tools > Disk Admin.**
2. Right-click to create NTFS partition.
3. Label drives as:
  - A – floppy
  - B – empty
  - C – O/S System drive 0
  - D – 2<sup>nd</sup> drive 1
  - E – CD-ROM
  - F – 4 Gb partition drive 0 (extra partition)
4. Close.

## **F Install Microsoft Windows NT® Service Pack 6a**

1. Insert **Microsoft Windows NT® Service Pack 6a** disk into drive.
2. At the Read Me file that launches, select **Windows NT® Service Pack 6a for PC.**
3. Follow prompts.
4. **Restart** when prompted.

## **G Install Video Driver**

1. Insert **International ATI Installation CD, Version 105** into the drive.
2. Choose **ATI Easy Install**.
3. Follow prompts.
4. Select **Express Install**. (Please wait until installation completes.)
5. Recommend restarting here.
6. At Control Panel window, select:
  - 265 Colors
  - true color
  - 75 Hz
  - 1024 x 768 pixels
  - small fonts
7. At Change Display Settings window, select: ATI as Manufacturer and ?..... for Display.
8. Remove CD from drive.
9. **Restart** when prompted.

## H Install Ethernet Software

1. Insert **Intel® Desktop Board D815EEA** CD into drive.
2. Select:
  - Intel Ethernet Express (Pro/100 LAN)
  - Norton AntiVirus
  - Adobe Acrobat Reader
3. Select **Install Now** and follow LAN setup instructions for installing WINNT Networking. F:/ is CD-ROM drive for Workgroup.
4. Remove CD from drive.
5. Restart.

## I Install Services for Macintosh

1. Right-click on **Network Neighborhood**.
2. Select **Properties > Services tab > Add > select Services for Macintosh** and click **OK**.
3. When prompted, put the Windows NT Server CD into the drive.
4. Change the entry in the window to **E:\i386**. (Don't use Have Disk... or it looks for a setup file.)
5. Close.
6. After Services for Macintosh installed, remove CD from drive.
7. **Restart** when prompted.

## **J Install Microsoft TCP/IP Printing**

1. Right-click on **Network Neighborhood**.
2. Select **Properties > Services tab > Add** .
3. Select **Microsoft TCP/IP Printing** and click OK
4. When prompted, put the Windows NT Server CD into the drive.
5. Change the entry in the window to **E:\i386**. (Don't use Have Disk... or it looks for a setup file.)
6. After TCP/IP Printing is installed, remove CD from drive.
7. Restart when prompted.
8. Select **Start >Settings->Control Panel**.
9. Double click the **Services** control panel.
10. Scroll down to **TCP/IP Print Server**.
11. Click the **StartUp...** button.
12. Select the **Automatic** radio button in the **Startup Type** group.
13. Click **OK**.
14. Click the **Start** button to start the Microsoft TCP/IP Printing service.
15. Close.

## **K Re-Install Service Pack 6a**

Go back to **F** and go through install steps.

## **L Install Option Pack 4.0**

1. Insert Option Pack 4.0 CD into drive.
2. Run the program from drive E.
3. **Minimum** install.
4. Select default locations.
5. When install is complete, remove CD from drive.
6. **Restart** when prompted.