Xerox Phaser 6115MFP USB PnP Installation Instructions

Use the following procedure to install your Xerox Phaser 6115MFP WIA scan driver, GDI print driver, and Multifunction Control Centre (MCC) over a Universal Serial Bus (USB) connection.

- 1. Double-click the p6115usb.exe file to extract the USB print and scan drivers, and the Multifunction Control Center (MCC) utility to the C:\P6115USB folder.
- 2. Connect a USB 2.0 certified cable to available USB ports on the Phaser 6115MFP and your PC.
- 3. Turn the Phaser 6115MFP power switch to the On position.

Scan Driver Installation

4. Windows will automatically detect the new device and launch the **Found New Hardware Wizard**, as depicted below.

Found New Hardware Wiz	ard
	Welcome to the Found New Hardware Wizard
	Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy
	Can Windows connect to Windows Update to search for software?
	◯ Yes, this time only
	Yes, now and every time I connect a device
	No, not this time
	Click Next to continue.
	< Back Next > Cancel

5. Click the *No, not this time* radio button, then click **Next**.

Found New Hardware Wiz	tard
	This wizard helps you install software for: XEROX Phaser 6115MFP
Let 1	If your hardware came with an installation CD or floppy disk, insert it now.
	What do you want the wizard to do? Install the software automatically (Recommended) Install from a list or specific location (Advanced)
	Click Next to continue.
	< Back Next > Cancel

6. Click the *Install from a list or specific location (Advanced)* radio button, then click **Next**.

lea	ase choose your search and installation options.
	Search for the best driver in these locations.
	Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
	Search removable media (floppy, CD-ROM)
	Include this location in the search:
	D:\ Browse
	Don't search. I will choose the driver to install.
-	Choose this option to select the device driver from a list. Windows does not guarantee to the driver you choose will be the best match for your hardware.
	(Back Next) Cancel

7. Click the *Don't search, I will choose the driver to install* radio button, then click **Next**.

Hardware Type.		N.
Select a hardware type, and then cli	ck Next.	
Common hardware types:		
Show All Devices		^
1394 Debugger Device 61883 Device Class		
AVC Device Class		
Batteries		
Bluetooth Radios		
Computer		
		~

8. Verify that the Show All Devices option is selected, then click Next.

Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.		
7		
Manufacturer	Model	
(Standard CD-ROM drives) (Standard IDE ATA/ATAPI cor	CD-ROM Drive (force CDDA accurate)	
(Standard keyboards) (Standard system devices)	CD-ROM Drive (force IMAPI disable)	
<	CD-ROM Drive (IMAPI settings 0,1)	
	Have Disk	
This driver is digitally signed. Tell me why driver signing is important of the signing is important.		

9. Click the **Have Disk...** button.

v Hardware Wizard he device driver you want to install for this hardware.
all From Disk
Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below. Cancel Copy manufacturer's files from: Browse
< Back Next > Cancel

10. Click **Browse** to locate the scan driver.

Install From			
)_Scan Drivers	 O 1 	کا ت
1a 9P6115MFF	>		
it.	_		
it	-		
it it it	-		

11. Browse to the C:\P6115USB\32-bit\English_Scan Drivers folder and select the P6115MFP.inf file, then click Open.




12. At the Install From Disk window, click OK.

Select the device driver you want to install for this hardware.		
XEROX Phaser 6115MFP WIA		
	<u></u>	
This driver is digitally signed.	Have Disk	

13. Select XEROX Phaser 6115MFP WIA, then click Next.

Please wait while the wizard installs the software		
XEROX Phaser 6115MFP WIA		
Ď	\triangleright	
P6115_EX.dll To C:\WINDOWS\system32		
	<pre>< Back Next > Cancel</pre>	


14. The WIA scan driver files are copied to the computer.

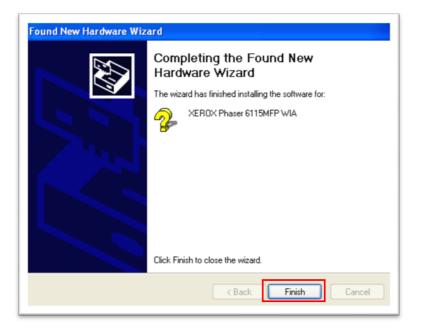


- 15. The WIA scan driver is now installed. Click **Finish** to continue.
- 16. Next, the printer driver will be installed.

Printer Driver Installation

17. The Found New Hardware Wizard will launch a second time to install the printer driver.

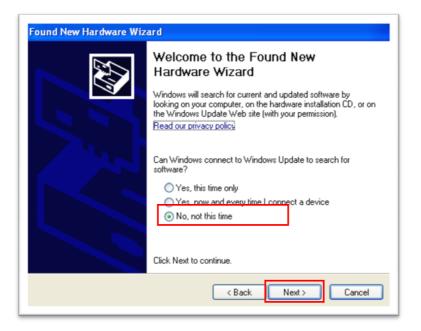

18. Click the No, not this time radio button, then click Next.

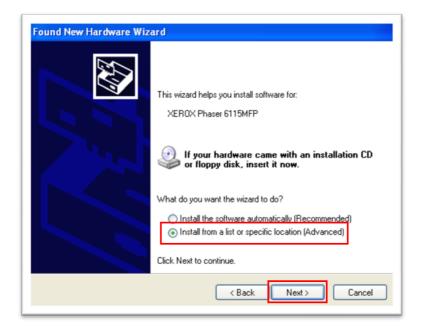

19. Click the Install from a list or specific location (Advanced) radio button, then click Next.

lea	se choose your search and installation options.
(Search for the best driver in these locations.
	Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
	Search removable media (floppy, CD-ROM)
	Include this location in the search:
	D:\ Browse
(Don't search. I will choose the driver to install. Choose this option to select the device driver from a list. Windows does not guarantee the driver you choose will be the best match for your hardware.
	< Back Next > Cancel

20. Click the *Don't search, I will choose the driver to install* radio button, then click **Next**.

Hard w are Type.		
Select a hardware type, and then cl	ck Next.	
Common hardware types:		
Show All Devices		~
1394 Debugger Device		
G1883 Device Class AVC Device Class		
Batteries		
Bluetooth Radios		
S Computer		
Services Services		~
🗐 Nienlau adantere		
	< Back Ne	ext > Cancel


21. Verify that the *Show All Devices* option is selected, then click **Next**.

Select the device driver you want to install for this hardware. Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.		
Manufacturer (Standard CD-ROM drives) (Standard IDE ATA/ATAPI cor (Standard keyboards) (Standard system devices)	Model CD-ROM Drive (force CDDA accurate) CD-ROM Drive (force CDDA inaccurate) CD-ROM Drive (force IMAPI disable) CD-ROM Drive (IMAPI settings 0,1)	
This driver is digitally signed. <u>Tell me why driver signing is imp</u>	Have Disk	
	<pre></pre>	

22. Click the Have Disk... button.

	ardware Wizard evice driver you want to install for this hardware.
nstall F	rom Disk 🛛 🔀 '
Ma (St. (St. (St. (St. (St.	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below. Cancel Copy manufacturer's files from: Browse
	< Back Next > Cancel


23. Click **Browse** to locate the printer driver.

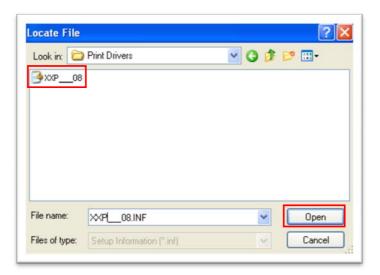

24. Browse to the C:\P6115USB\32-bit\English\Print Drivers folder and select the XX___08.INF file, then click Open.




25. At the Install From Disk window, click OK.

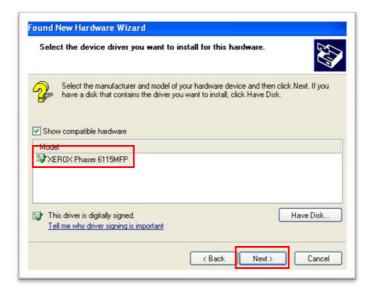

26. Select XEROX Phaser 6115MFP, then click Next.



27. The printer driver files are copied to the computer.

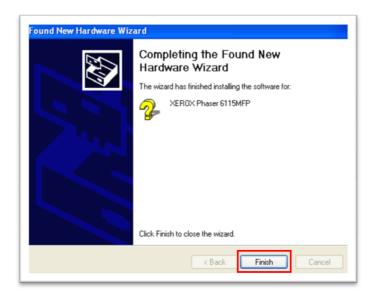

28. The printer driver is now installed. Click **Finish** to continue.

1. Browse to the C:\P6115USB\32-bit\English\MCC folder.




2. Double-click the **Setup.exe** icon to launch the installer.



3. Select the desired language, then click **OK**.



4. Click **Next** to continue.

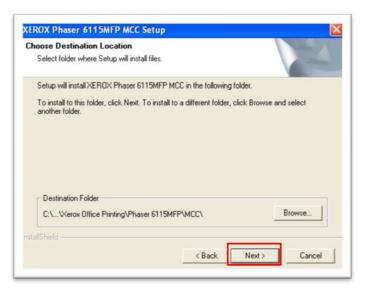

5. Click **Next** to accept the default destination location.

elect Program Folder Please select a program folder.	
Setup will add program icons to the P name, or select one from the existing	Program Folder listed below. You may type a new folder g folders list. Click Next to continue.
Program Folders:	
Xerox Office Printing\Phaser 6115M	IFP\MCC\
Existing Folders:	
Accessories	<u>^</u>
Administrative Tools Foxit Beader	
Games	
Google Updater	
Mozilla Firefox	
Parallels Tools	
Powertoys for Windows XP	
Charles	<u>.</u>
Startup	
Startup	

6. Click **Next** to accept the default program folder.

Setup Status	
XEROX Phaser 6115MFP	MCC Setup is performing the requested operations.
Installing:	
	94%
stallShield	Cancel

7. The required files are copied to the computer.



8. Click **Finish** to complete the installation.