

Launch Release Notes

VersaLink B600/B610 & B605/B615

Firmware Release 3x.05.71- PL2

Release Date: October 19, 2017

dc18rn3724

Software Release Details

Products (Click on product name to access software)	System	Controller ROM
Xerox@VersaLink@B600/B610	32.05.71	1.13.32
Xerox@VersaLink@B605/B615	33.05.71	1.13.32

Purpose

This release addresses the following:

- Launch Release

Installation Instructions

The Software Upgrade file (Firmware file) is obtained from the Xerox web site: <http://www.support.xerox.com>

- In "Enter product name or number" enter product number **B6xx**
- Select Versalink **B600/B610 or B605/B615**
- Select "Drivers and Downloads"
- In the "Refine Results" box on the left
- Select Firmware.
- Select Accept for the EULA.

Please print a configuration page before updating to retain a copy of your current network settings.

To Print a Configuration Report

1. At the printer control panel, press the Home button.
2. Touch Device > About > Information Pages.
3. Touch Configuration Report.
4. To return to the Home screen, press the Home button.

Updating the Printer Software

This section provides instructions to upgrade machine software over the network via Xerox CentreWare Internet Services (CWIS).

- Software installation begins several minutes after you submit the software to the printer.
- When installation begins, the Embedded Web Server is disabled.

- You can monitor the installation progress from the printer control panel.
- When the installation completes, the printer restarts and prints a Software Upgrade Report.

Checking the Software Version

You can update your printer when Xerox releases a new version of printer software or firmware. Before you download and install new software, determine the current software version installed on your printer.

To determine the firmware version from the Embedded Web Server:

1. In the Embedded Web Server, click System.
2. Click Software Update.
3. In the Software Update area, view the Current Version.

To determine the firmware version at the printer control panel:

1. At the printer control panel, press the Home button.
2. Touch Device > Software Update.
3. For Current Version, view the version number.

Enabling Upgrades

1. In the Embedded Web Server, click System.
2. Click Software Update.
3. In the Software Update area, click Enable.

Installing Software Manually

This method explains the steps for installing software that you have downloaded from the Xerox website.

1. If needed, print the Configuration Report.
 - a. At the printer control panel, press the Home button.
 - b. Touch Device > About > Information Pages.
 - c. Touch Configuration Report.
 - d. To return to the Home screen, press the Home button
2. At your computer, download the software to install.
3. Click the file you downloaded and unzip the contents.
4. Open a Web browser, then type the IP address for your device.
5. Log in as administrator, then click System > Software Update.
6. In the Update with File Specified area, click Select.
7. Navigate to the location where you downloaded the file, then select the .bin file.
8. Click Install Now