

 
# Xerox® WorkCentre® 4265

## Printer Symbols



Symbol	Description
	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the drum cartridges to direct sunlight.
	Do not burn the item.
	Do not burn the toner cartridges.
	Do not burn the drum cartridges.
	Hot surface. Wait for the indicated time before handling.
	Cooling

Symbol	Description
	Elapsed Time
	On
	Off
	Standby
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not use transparencies or overhead projector sheets.
	Do not reload paper previously printed on or used.
	Do not use postcards.
	Do not use envelopes.
	Do not copy money.
	Add paper or media.

Symbol	Description
	Paper-level Indicator
	Do not load paper in the tray above the <b>MAX</b> line.
	Paper Jam
	Clean the document glass as indicated.
	Status Indicator
	Flip to open.
	Lock
	Unlock
	Paper Clip
	Supply Paper
	1-Sided Original
	Hole-punched Paper

Symbol	Description
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
	USB Universal Serial Bus
	USB Port for Service Only
	LAN Local Area Network
	Ethernet Port
	Parallel Port
	Internet Connection
	Wireless
	Telephone Line
	Weight
	Start Button
	Stop Button

Symbol	Description
	Pause Printing Button
	Log In/Out Button
	Help Button
	Services Home Button
	Services Button
	Job Status Button
	Printer Status Button
	Language Button
	Power Saver Button
	All Clear Button
	Dial Pause Button
	This item can be recycled.

