## Xerox® WorkCentre® 6027 Printer Symbols



Symbol	Description
<u>^</u>	Warning: Indicates a hazard that can cause serious injury or death if not avoided.
	Hot Warning: Hot surface on or in the printer. Use caution to avoid personal injury.
	Pinch Hazard: This warning symbol alerts users to areas where there is the possibility of personal injury.
•	Caution: Indicates a mandatory action to take to avoid damage to the property.
	Do not touch the part or area of the printer.
	Do not touch the part or area of the printer.
	Do not expose the imaging unit to direct sunlight.
<b>®</b>	Do not expose the imaging unit to light for more than 10 minutes.
	Do not burn the item.
	Do not burn the toner cartridges.
	Pinch Hazard: To avoid personal injury, use caution in this area.

Symbol	Description
175°C 347°F	Hot surface. Wait for the indicated time before handling.
	On
0	Off
<u></u>	Standby
	Do not use paper attached with staples or any form of binding clip.
	Do not use folded, creased, curled, or wrinkled paper.
	Do not load or use inkjet paper.
	Do not reload paper previously printed on or used.
	Do not use postcards.
	Do not use envelopes.
	Do not copy money.
<b>→</b>	Add paper or media.
81/	Paper Jam

Symbol	Description
8	Lock
9	Unlock
0	Paper Clip
*	Cooling
<b>D</b>	Elapsed Time
	Supply Paper
	1-Sided Original
	Hole-punched Paper
	Transparency
	Load letterhead face up.
	Load letterhead face down.
	Load labels face down.
•	USB Universal Serial Bus

Symbol	Description
<del></del>	LAN Local Area Network
<b>€</b>	Telephone Line
	Weight
<b>♦</b>	Start Button
igorplus	Stop Button
	Services Home Button
	Services Button
1	Job Status Button
ī	Printer Status Button
( CA //	Power Saver Button
CA //	Clear All Button
!	Error Status Indicator
<b>↔</b>   }•	Ready/Data Indicator
<b> </b>   <b> </b>  ∂	Pause/Redial Button
\$\tilde{\pi}	This item can be recycled.

