



Fig. 1
Make sure that the machine is not in operation before opening the front cover.

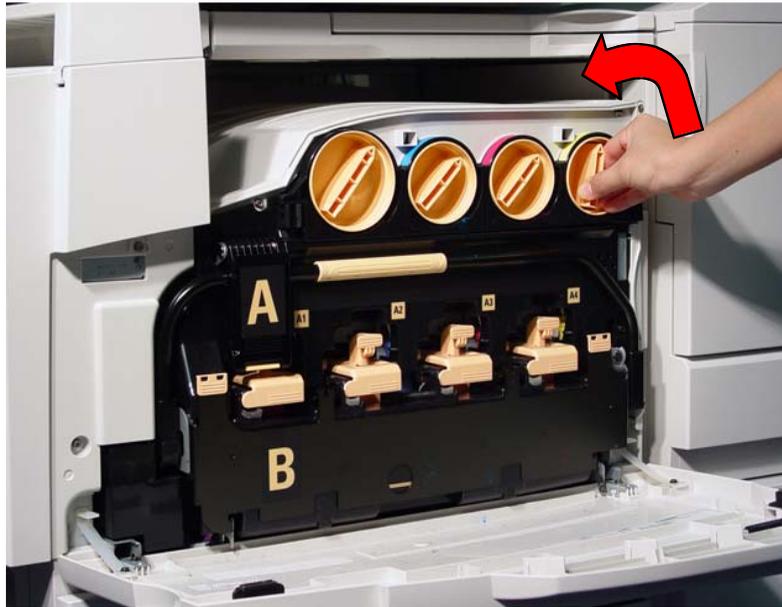


Fig. 2
Turn the toner cartridge of the color indicated in the message on the display to the left and up to the key mark. (open).

Note: "Y" stands for Yellow, "M" for Magenta, "C" for Cyan, and "K" for Black.

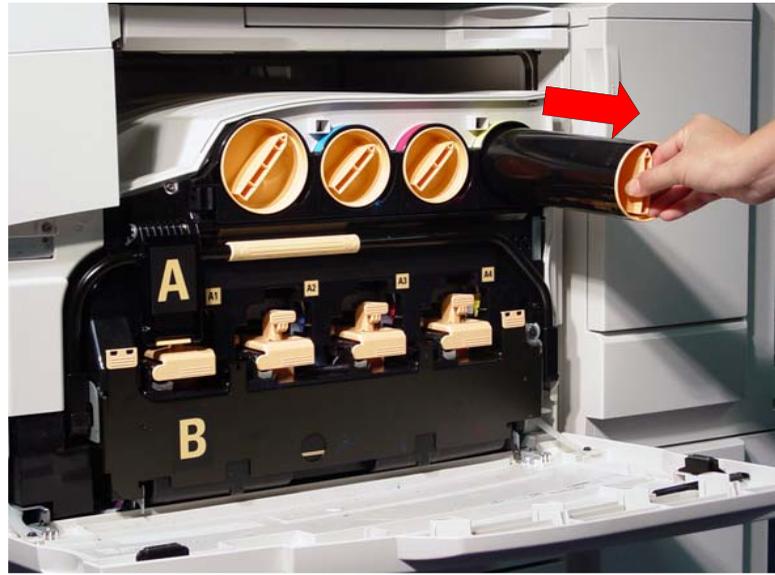


Fig. 3
Gently pull the toner cartridge towards you to remove.

Warning: Do not throw toner cartridges into an open fire. Toner remaining in the cartridge can cause an explosion and you can get burned. Pull out toner cartridges gently. Otherwise, toner may fly out of the cartridges.



Fig. 4
Lightly shake the new toner cartridge three or four times up and down and to the left and right.

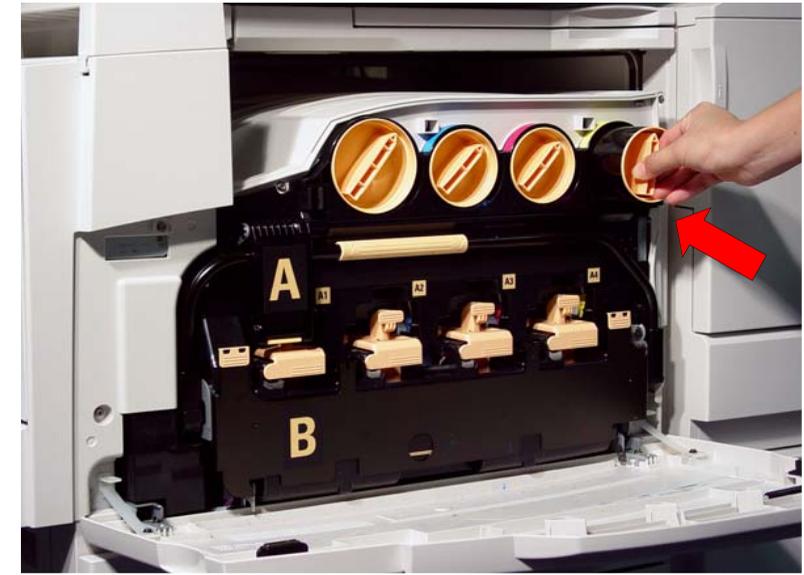


Fig. 5
Insert the toner cartridge as far as possible with the arrow on the cartridge facing up.

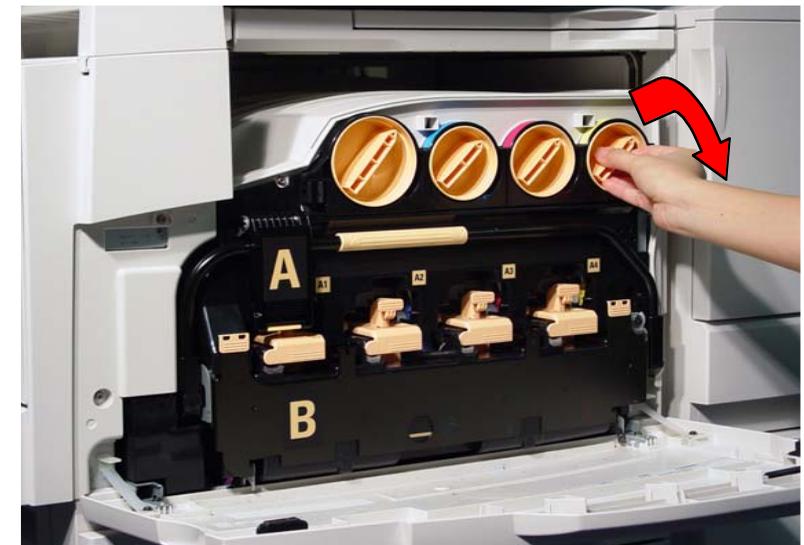


Fig. 6
Turn the toner cartridge to the right and down to the key (closed).

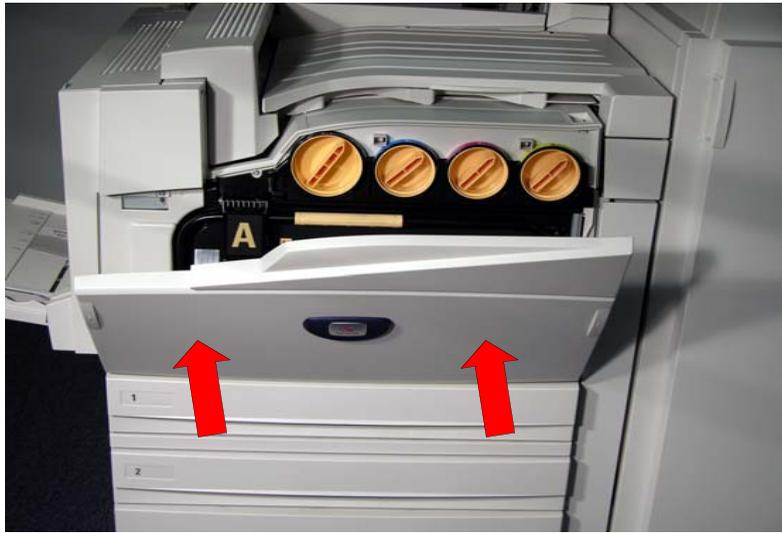


Fig. 7
Close the front door.

Note: A message will be displayed and the machine will not operate if the front cover is not completely closed.

Customer Replaceable Units

Drum Cartridge	13R588
Black Cartridge	6R1175
Cyan Cartridge	6R1176
Magenta Cartridge	6R1177
Yellow Cartridge	6R1178
Waste Toner Container	8R12903
Fuser Module 110V	8R12933
Staple Refills(Office Finisher)	8R12915
Staple Refills(Advanced Finisher)	8R12941
Staple Refills(Professional Finisher)	8R12925
Staple Refills(Convenience)	8R7644

Quick Start Guide

Replacing Toner Cartridges



WorkCentre Pro
C2128/C2636/C3545

XEROX®

Replacing Toner Cartridges - 2 of 2