


Versant 3100 Press

Paper Jams: Quick Access Guide


1

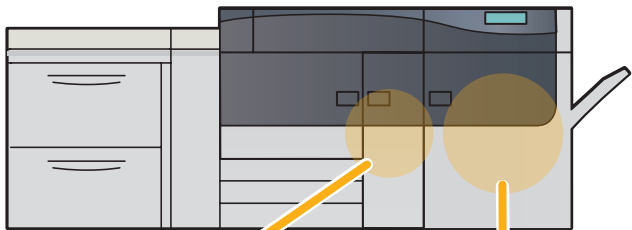

Long Paper Jam (When Optional Units are Installed)

If the jammed paper is lying across more than one unit, open the levers of units on both sides that are indicated in the Error Message area before you remove the jammed paper.


Printer Unit - Inside the Left Side Cover, Center Cover

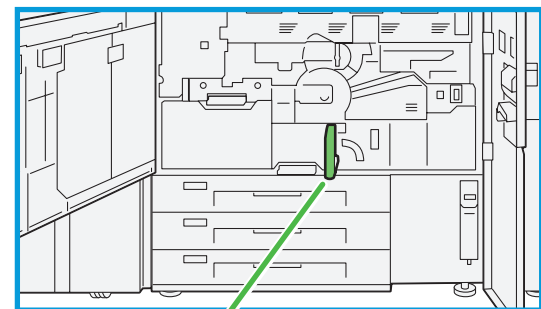

See... Printer Unit Manual "Chapter 3"

If the paper is curled and caught in the Transfer Module, stop pulling when jammed papers are visible, and then continue to pull it out with the paper holding down by a hand.


Rotate **Lever 2** clockwise to pull out the **Transfer Module**

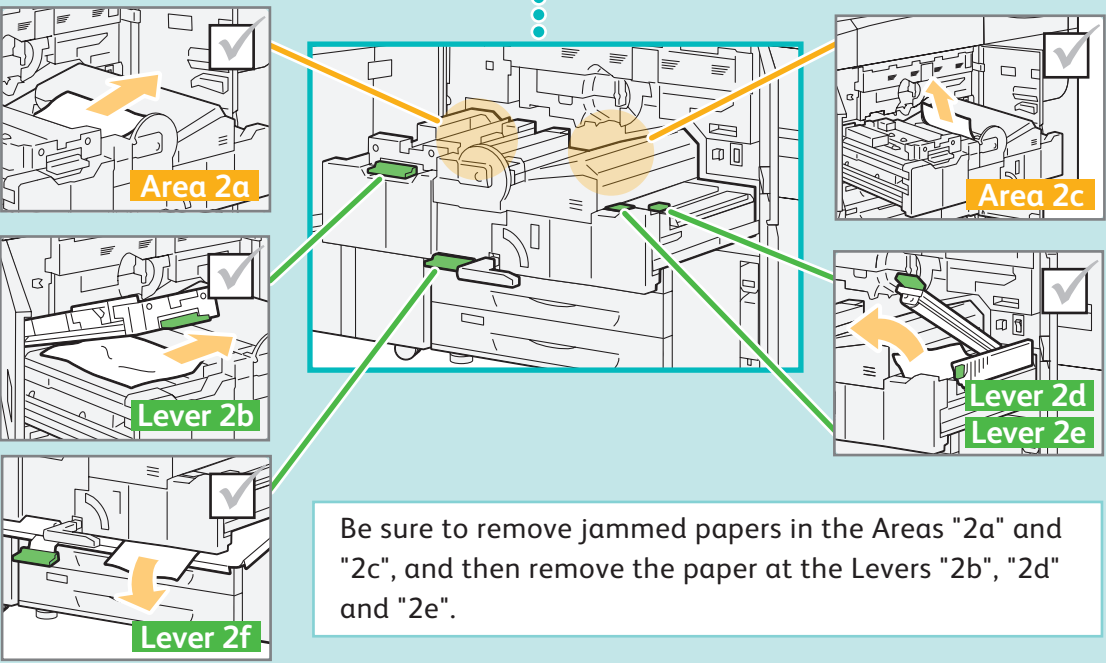

Be sure to remove jammed papers in the Areas "2a" and "2c", and then remove the paper at the Levers "2b", "2d" and "2e".

Printer Unit - Inside the Right Side Cover


See... Printer Unit Manual "Chapter 3"

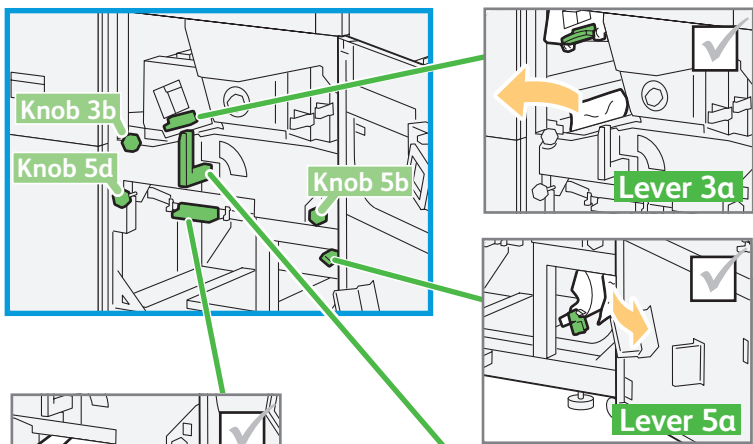

There may be extra sheets remaining in the printer unit. Be sure to turn the knob at least 3 times to check for extra sheets.



If you turn the Knob "5b" when no paper is jammed at the Lever "5a" or after removing jammed papers at the Lever "5a", paper jam may occur in other areas.

Rotate **Lever 4** clockwise to pull out the **Cooling Unit**

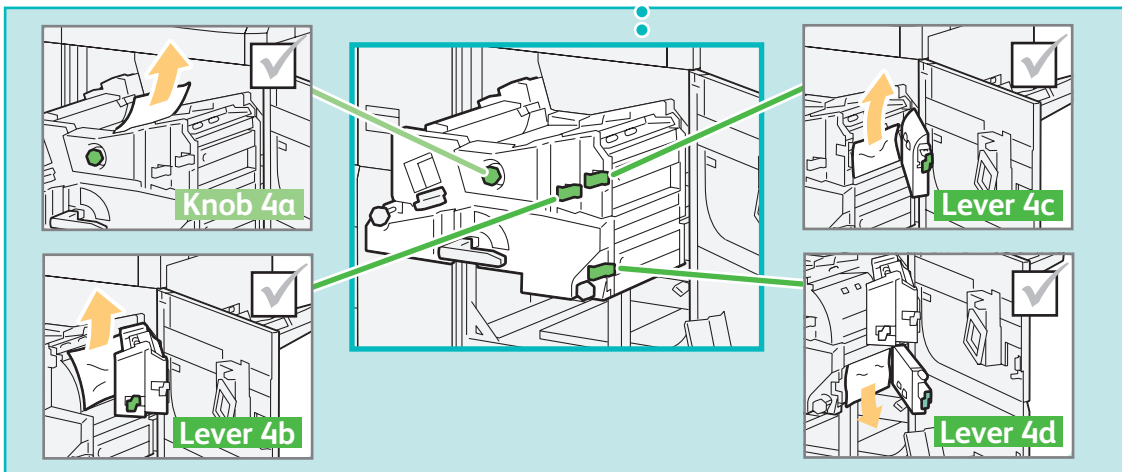

When error information appears on the touch screen

For detailed information on how to clear paper jams, refer to the error information on the touch screen or the relevant chapters of manuals for the jammed unit. The items are listed in descending order of priority. Clear the errors down the list.

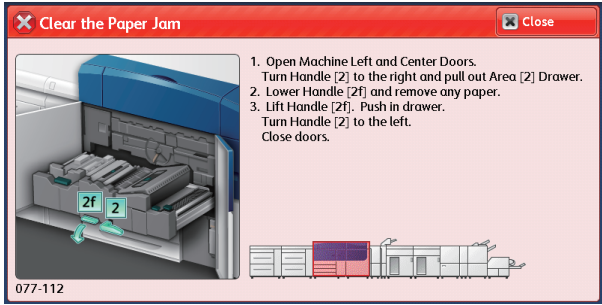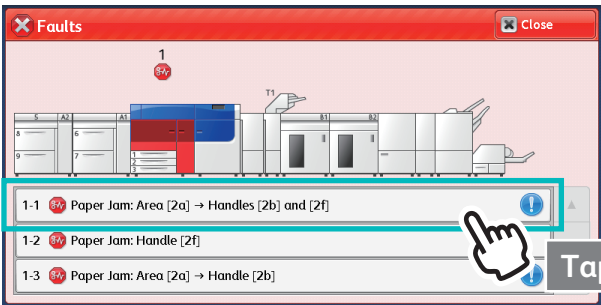


Attention is required to remove jammed papers in the part where **!** is displayed. Please read the instructions well and remove the paper.


Versant 3100 Press


Paper Jams: Quick Access Guide


2

**Printer Unit - Trays**


See... Printer Unit Manual "Chapter 3"


**Paper feeding unit**


**Tray 1 - 3**

**SquareFold Trimmer**


See... Optional Units Manual "Chapter 8"

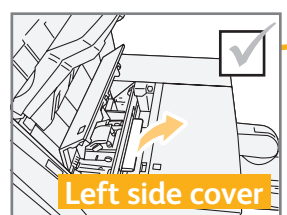**Left side cover**

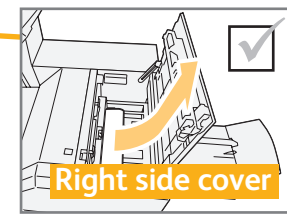
**Right side cover**


**High Capacity Feeder C3-DS**


See... Printer Unit Manual "Chapter 3"

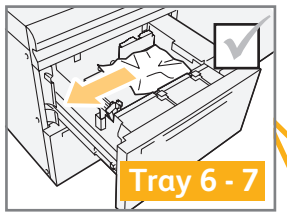
**Tray 6 - 7**


Before pulling out the Tray, make sure no paper is jammed inside the right side cover.

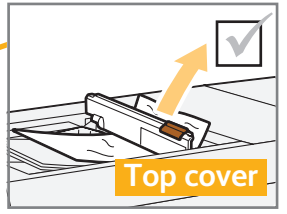
**Top cover**

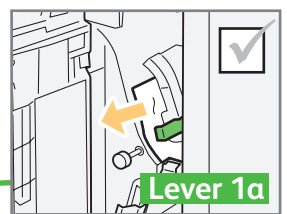
**Lever 1a**

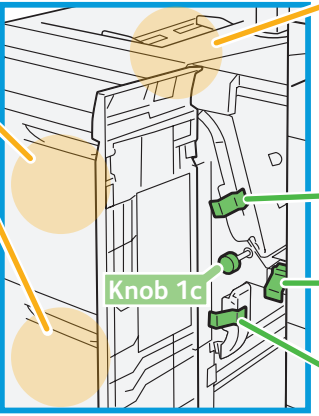**Knob 1c**

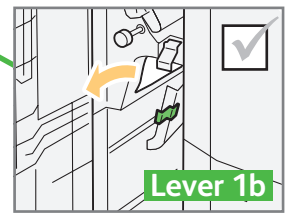
**Lever 1b**

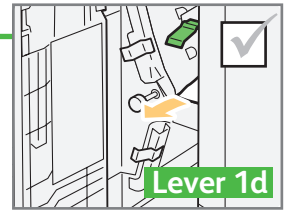
**Lever 1d**

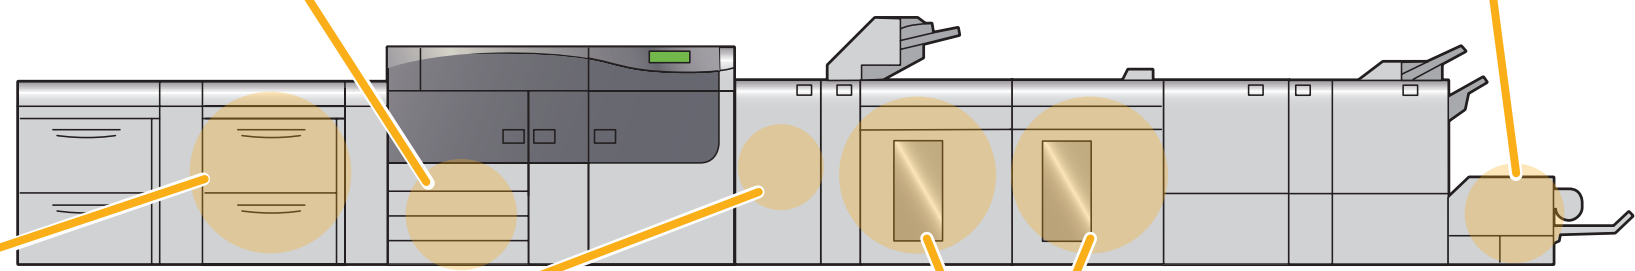



**High Capacity Stacker**

See... Optional Units Manual "Chapter 4"

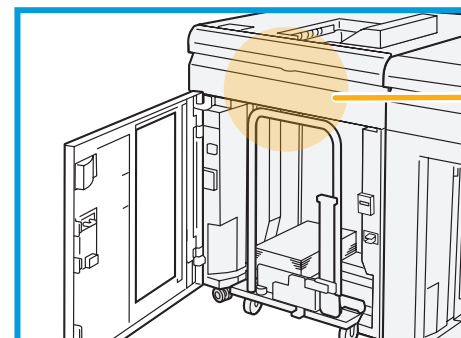
Inside the Lower cover

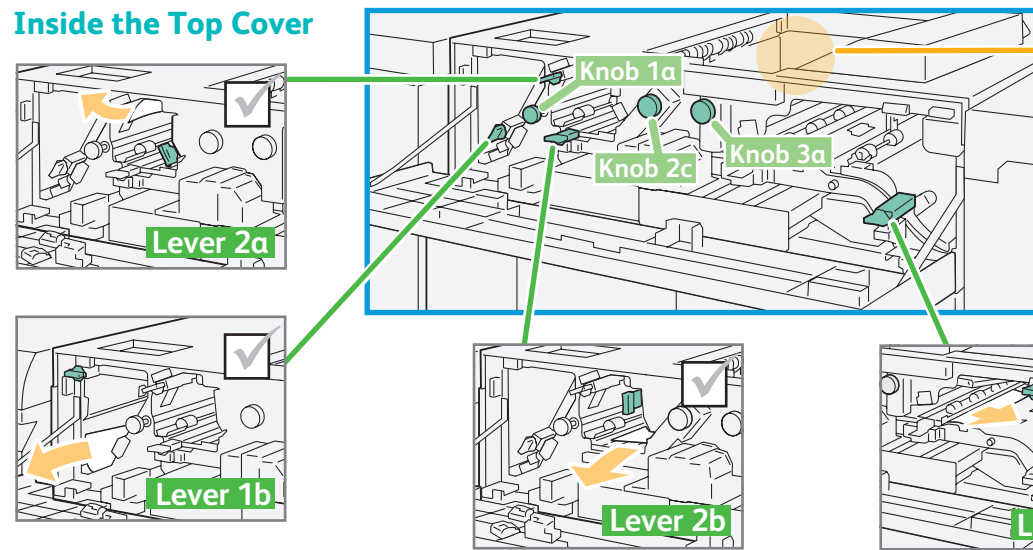

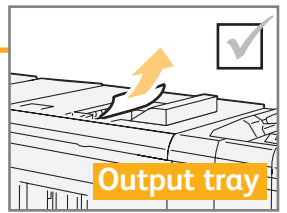Inside the Top Cover
**Lever 2a**
Knob 1a
Knob 2c
Knob 3a
Lever 1b
Lever 2b
Lever 3b


**Output tray**

**Interface Decurler Module**

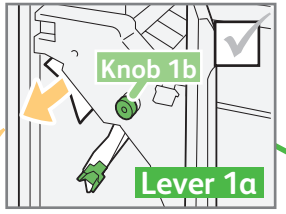See... Optional Units Manual "Chapter 2"

**Knob 1b**

**Lever 1a**

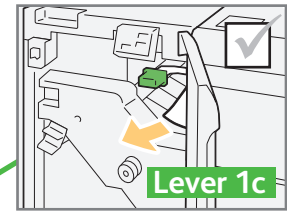
**Lever 1c**

- Make sure you turn the knob 10 times or more.
- When removing the jammed paper, carefully remove it by gently pulling it out.

Versant 3100 Press


Paper Jams: Quick Access Guide

3

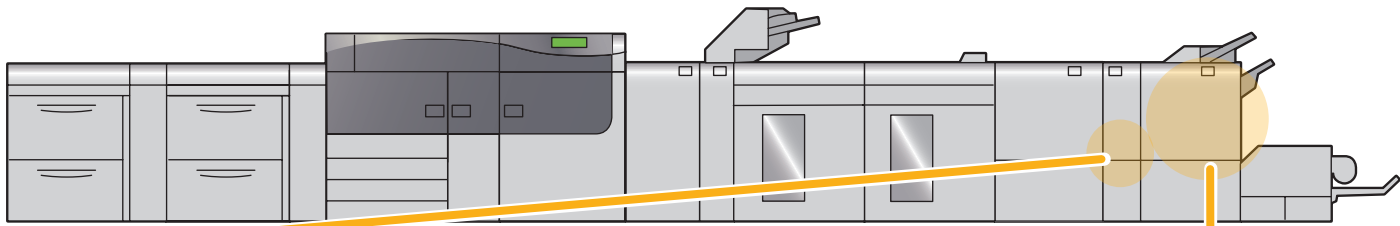


Folder Unit

See... Optional Units Manual "Chapter 6"

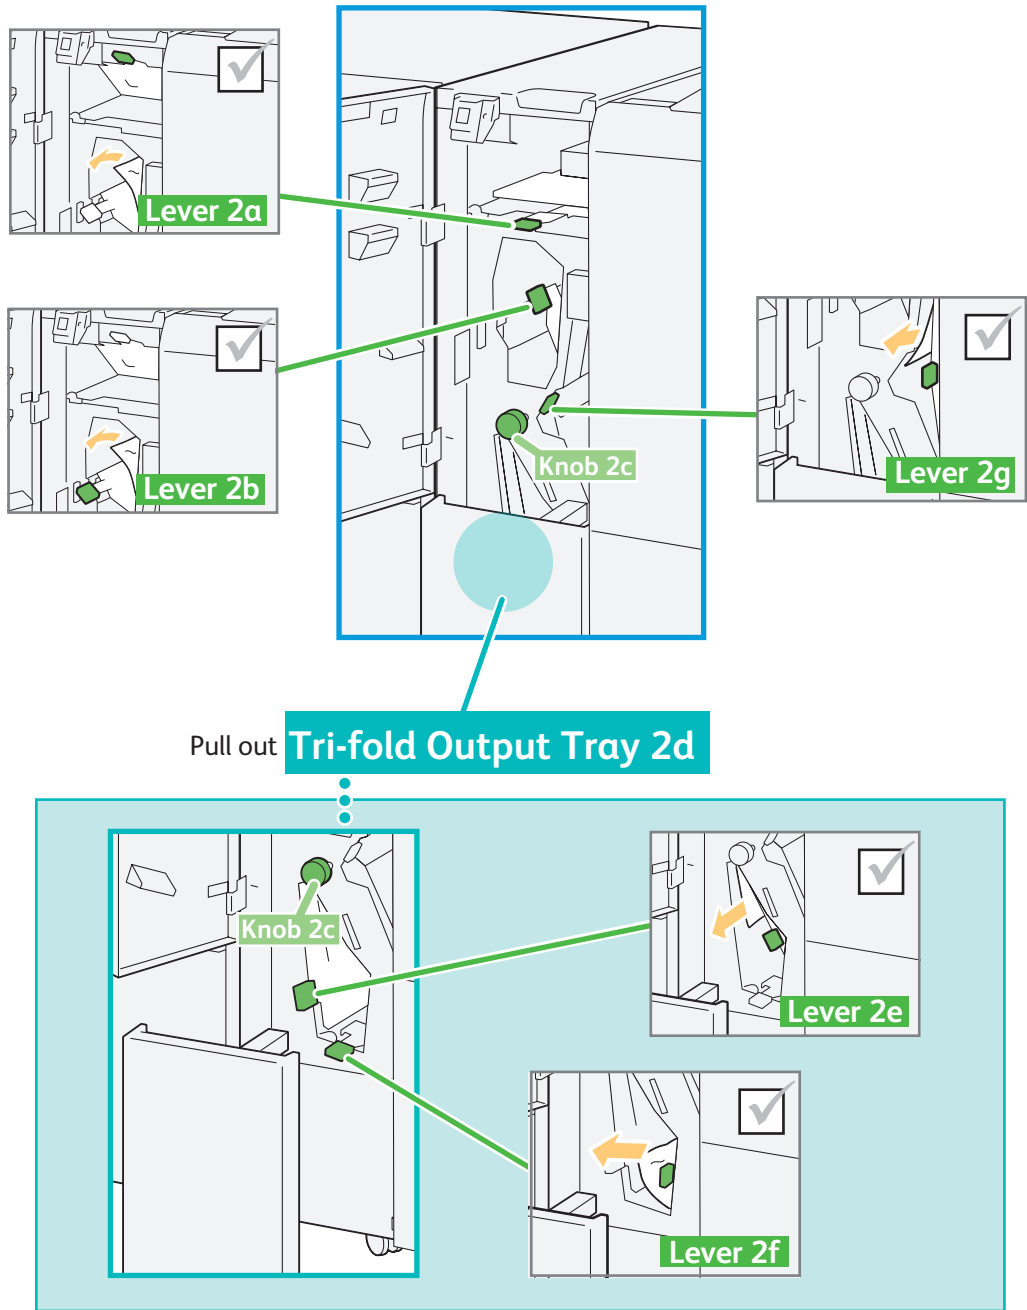

Finisher


See... Optional Units Manual "Chapter 7"

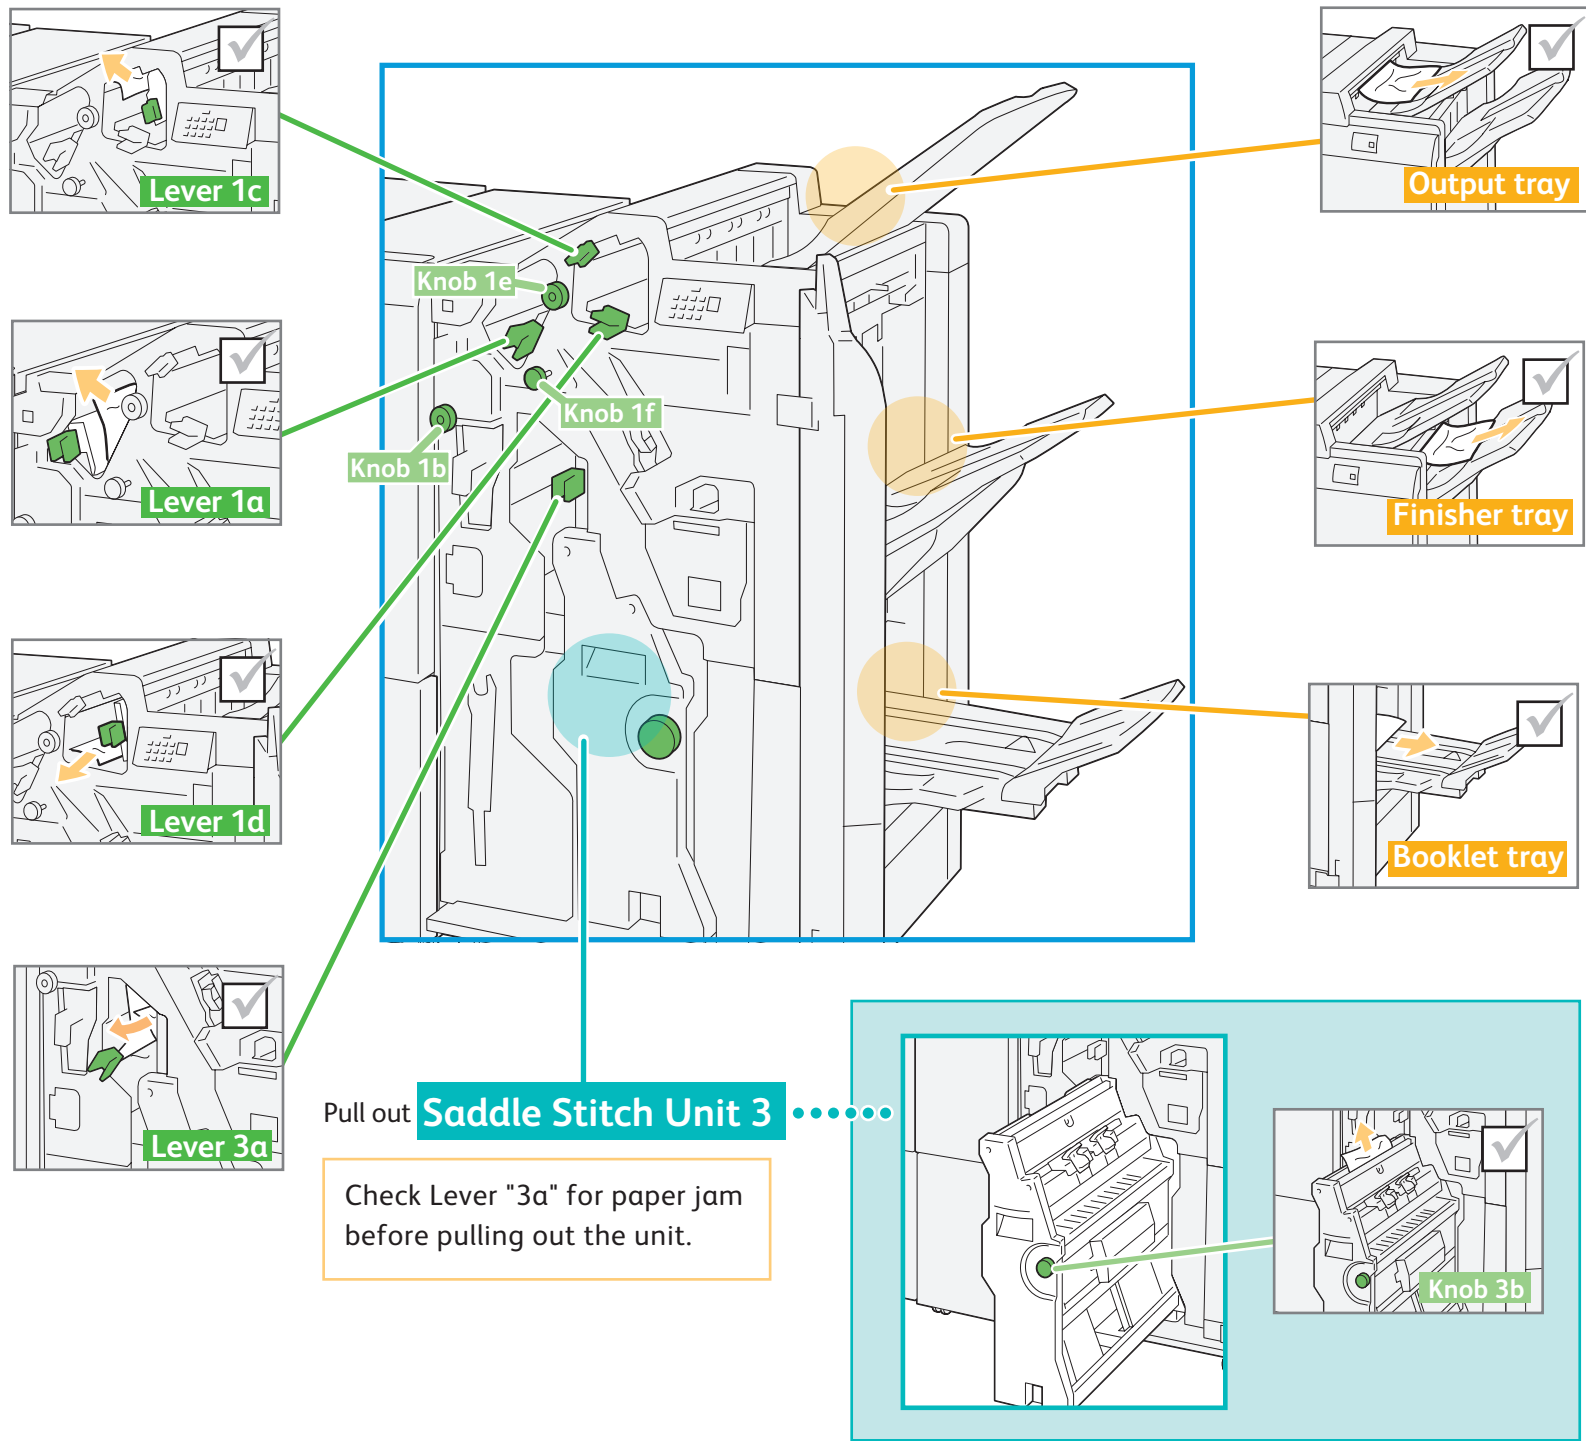


Versant 3100 Press





Paper Jams: Quick Access Guide


4

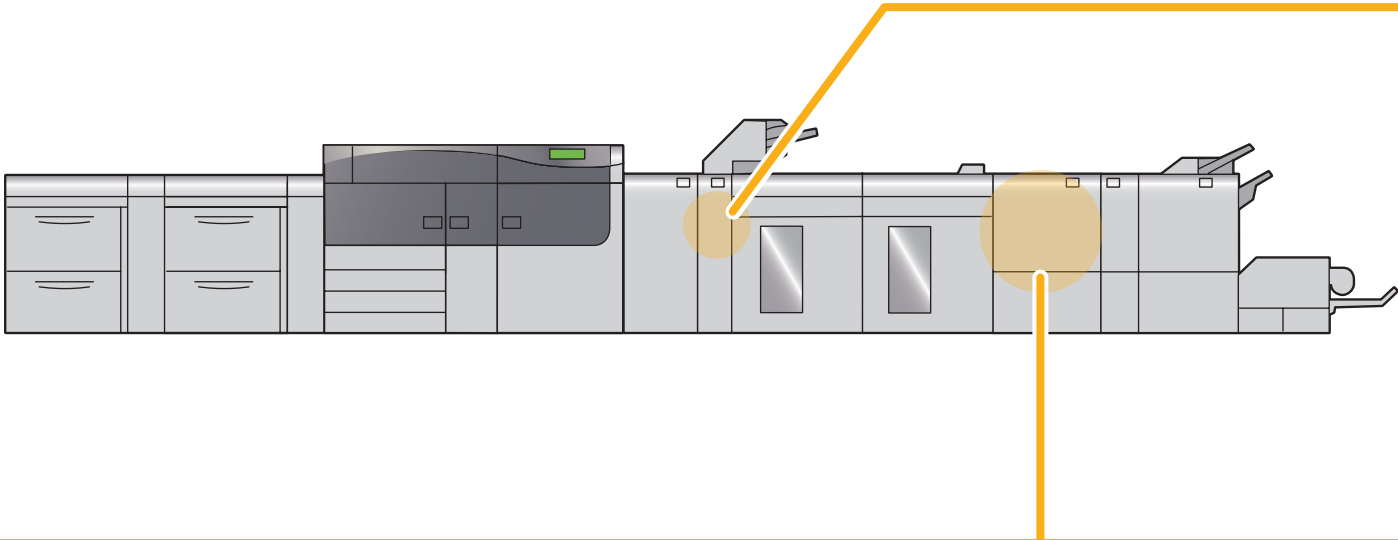


 **Insertion**

See... Optional Units Manual "Chapter 3"

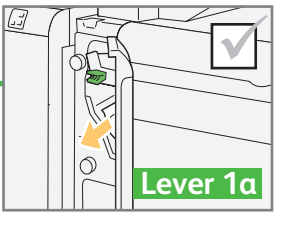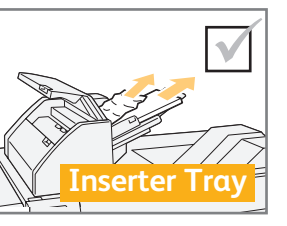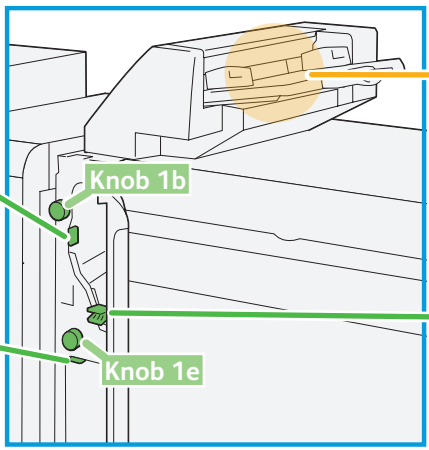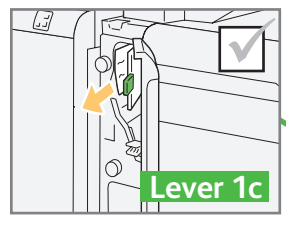


 **Crease/Two-sided Trimmer**

See... Optional Units Manual "Chapter 5"

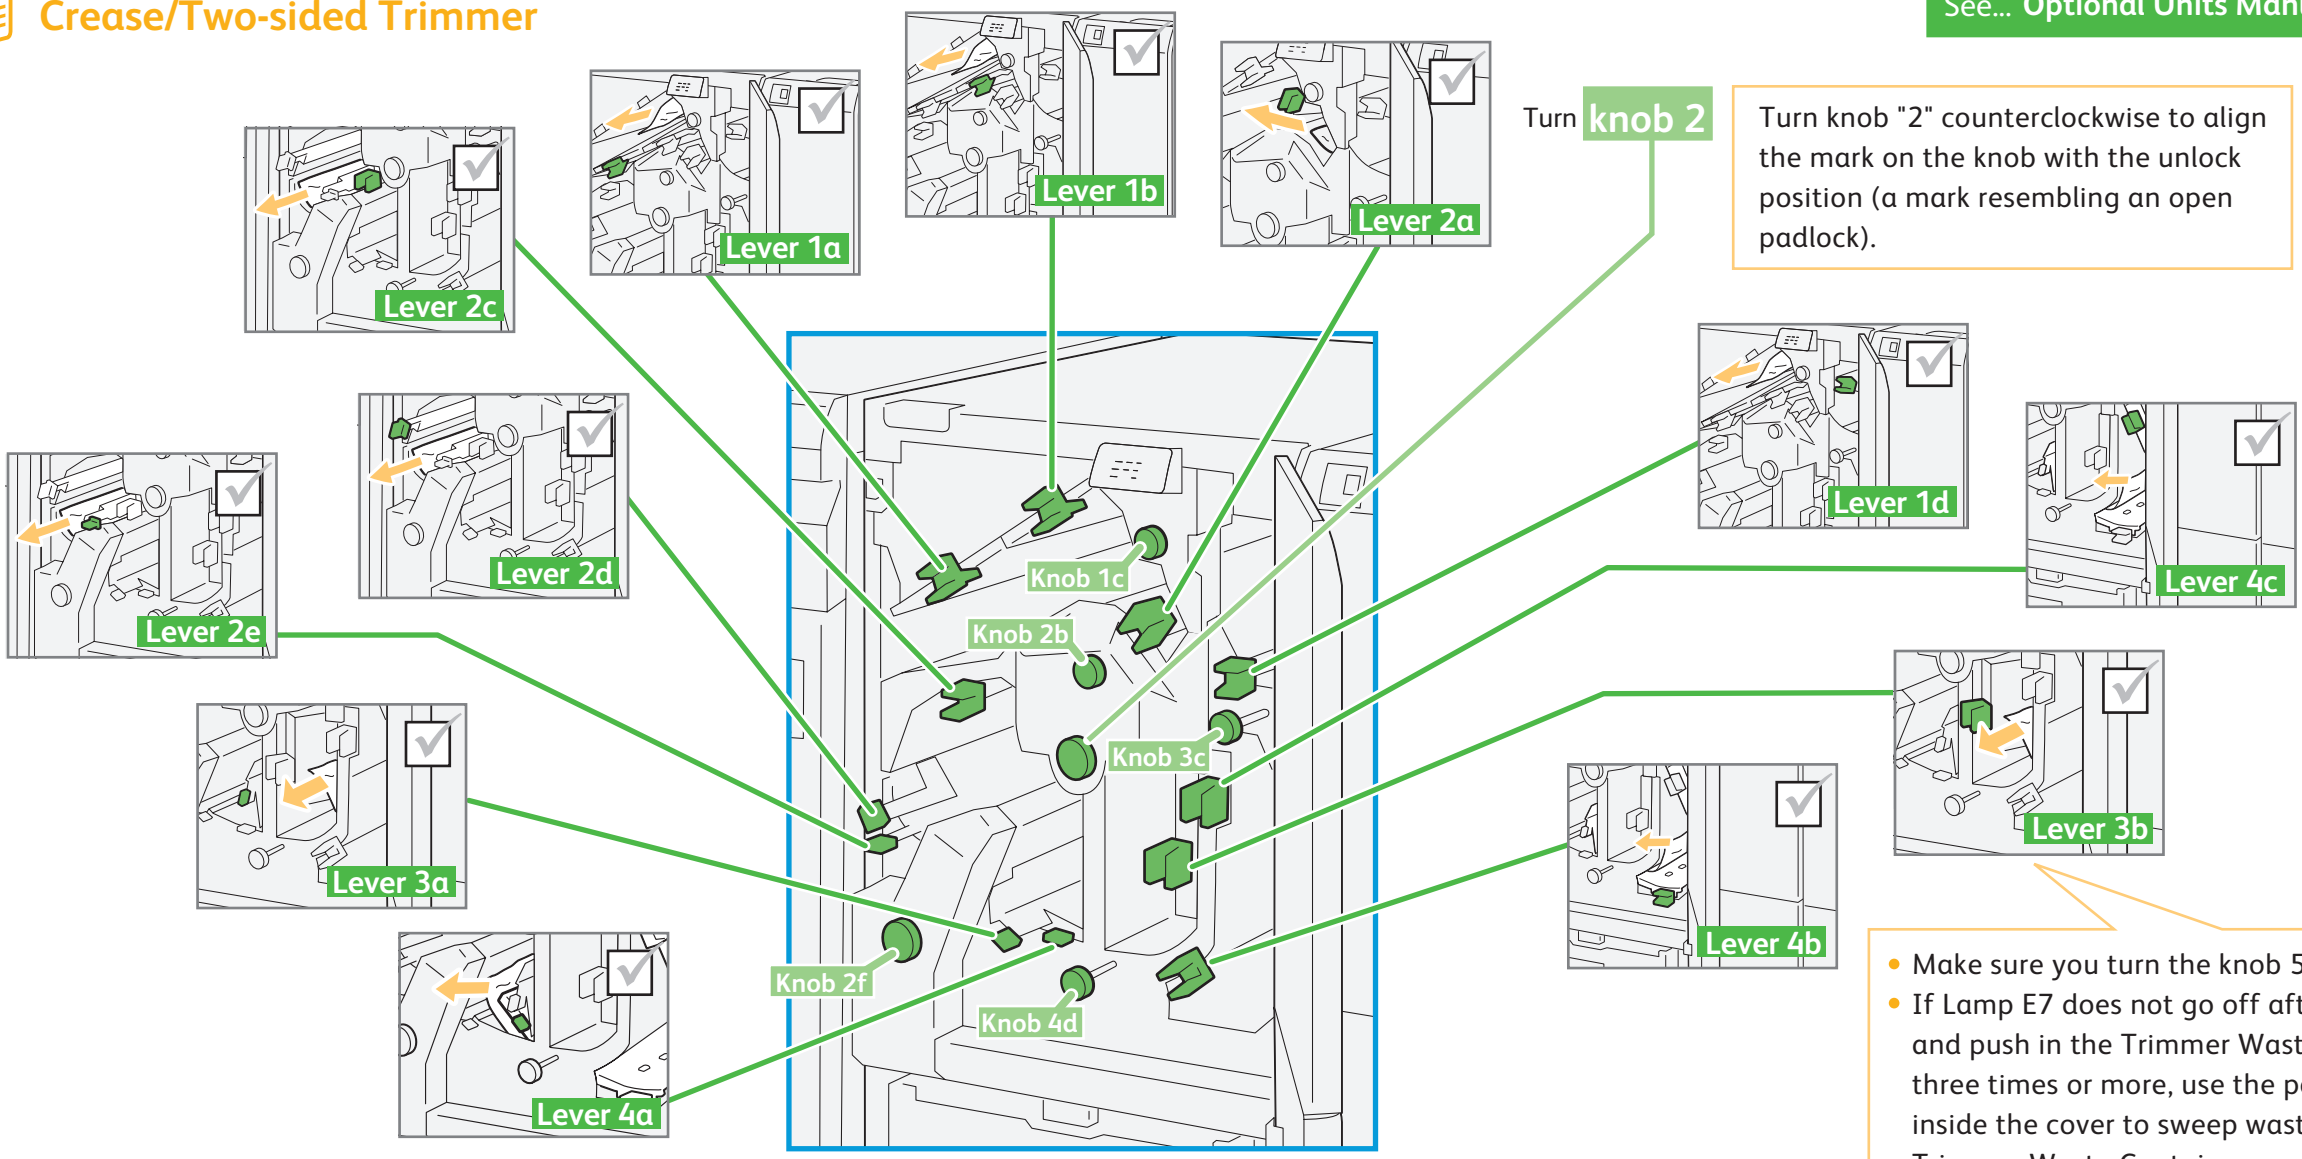

Turn **knob 2**

Turn knob "2" counterclockwise to align the mark on the knob with the unlock position (a mark resembling an open padlock).

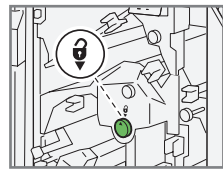


- Make sure you turn the knob 5 times or more.
- If Lamp E7 does not go off after you pull out and push in the Trimmer Waste Container three times or more, use the poker that is inside the cover to sweep waste into the Trimmer Waste Container.


Versant 3100 Press

Paper Jams: Quick Access Guide

5

 **2nd High Capacity Feeder C1-DS**

See... Optional Units Manual "Chapter 1"

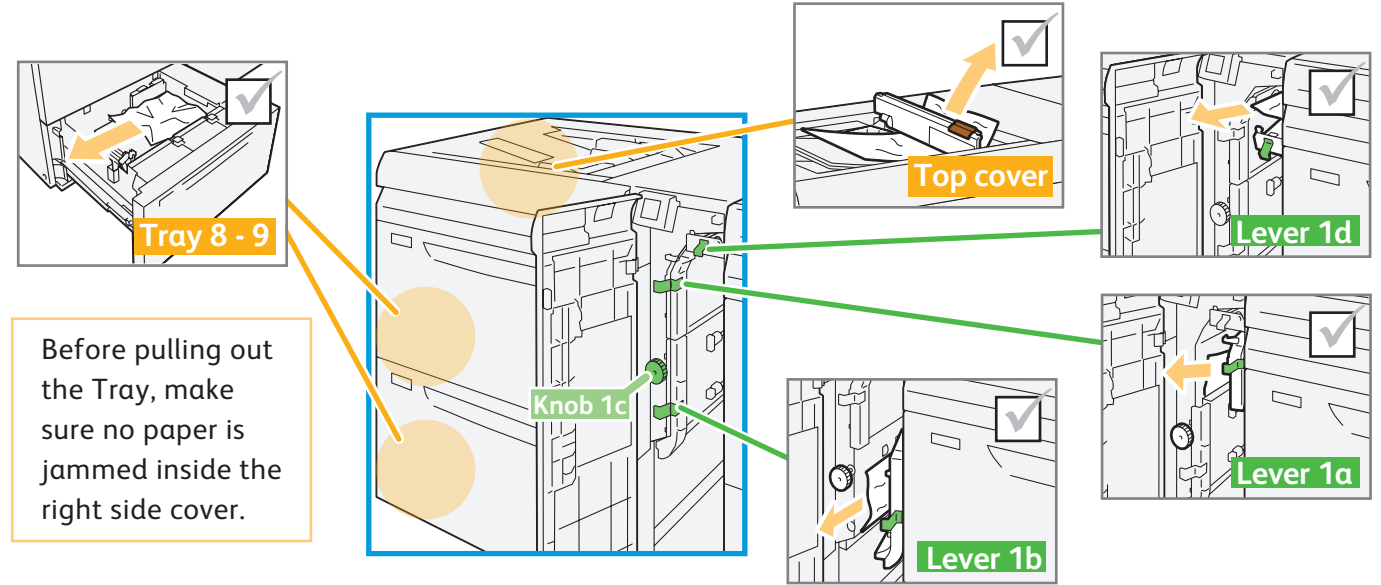

Tray 8 - 9

Top cover


Knob 1c

Lever 1d


Lever 1a

Lever 1b

Before pulling out the Tray, make sure no paper is jammed inside the right side cover.

 **Finishing Transport**

See... Optional Units Manual "Chapter 9"

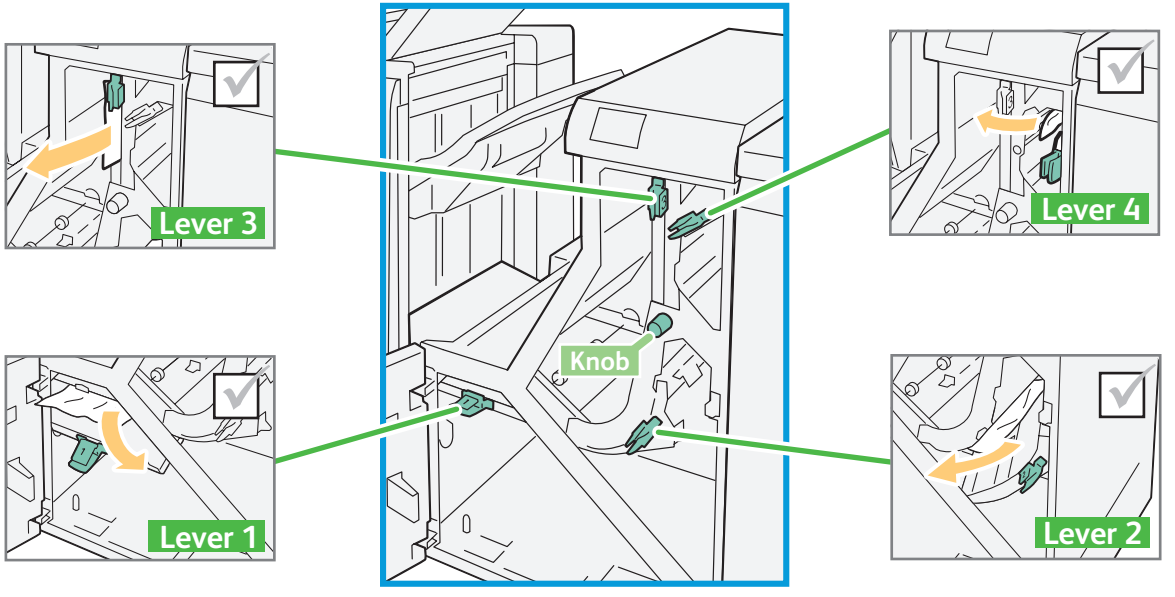


Lever 3


Knob

Lever 4


Lever 1

Lever 2

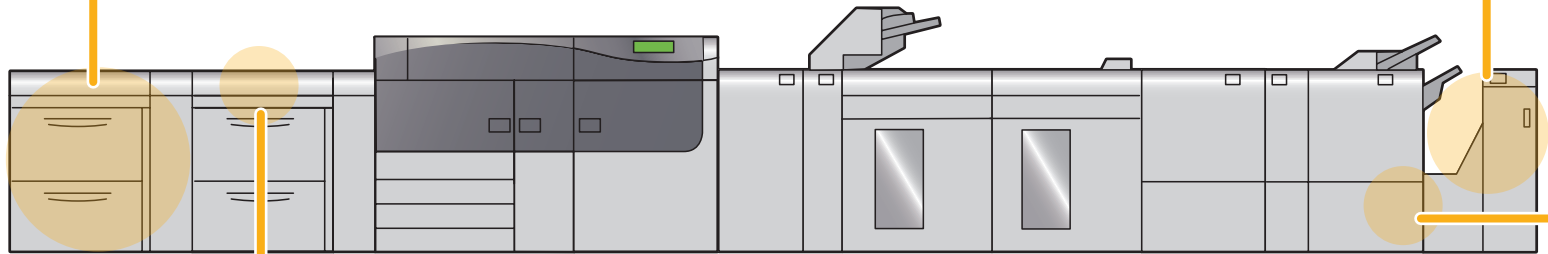

 **High Capacity Feeder C3-DS**

See... Optional Units Manual "Chapter 1"

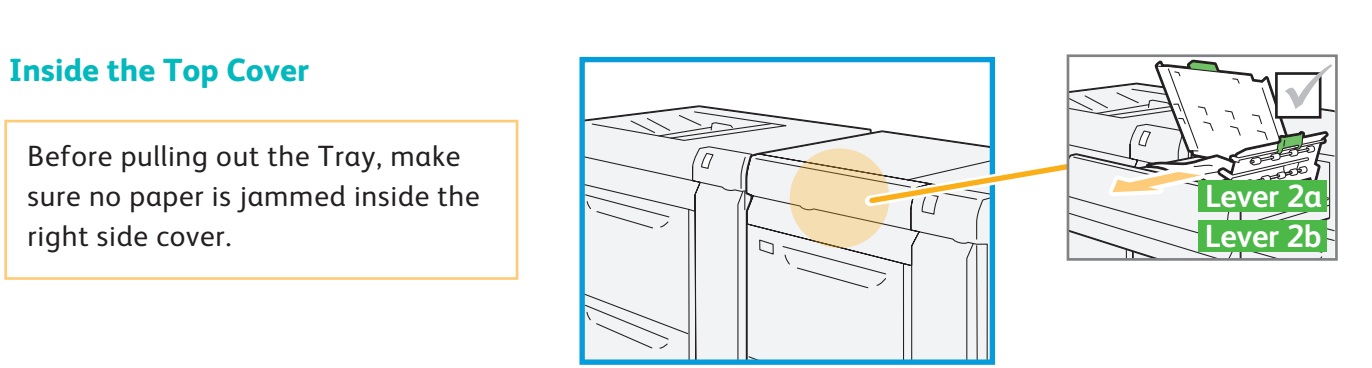


Inside the Top Cover

Before pulling out the Tray, make sure no paper is jammed inside the right side cover.


Lever 2a

Lever 2b

 **Finisher**

See... Optional Units Manual "Chapter 7"

Paper jam occurs in this part only when Finishing Transport is installed.

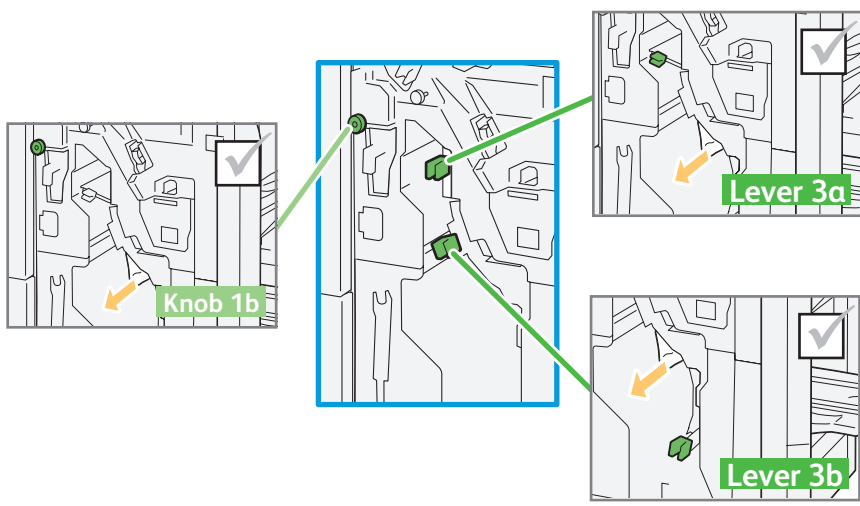

Knob 1b

Lever 3a

Lever 3b