

## Powering Off and Powering On the CS Platform™

### Procedure

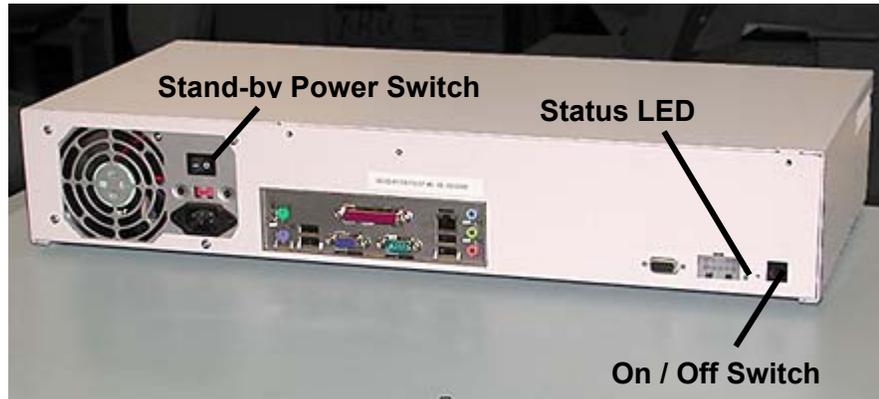


Figure 1

**Note:** Before the IOT is powered off, make sure the IOT is **not** in the Diagnostic Mode.

1. Power "**Off**" the IOT
2. Switch "**Off**" the CS Platform™ using the On / Off Switch. (Figure 1)
3. Switch "**Off**" the Stand-by Power Switch.
4. Switch "**On**" the Stand-by Power Switch
5. Switch "**On**" the CS Platform™ using the On / Off Switch. The CS Platform will beep and the Status LED should start to blink. This will take approximately 60 seconds.
6. Power "**On**" the IOT. Wait for the IOT to indicate that it is "Ready to Print", before resuming any CS Platform™ activity.