


## Using the Measurement Tool

Align the Image Quality defect on your copy or print with any of the intervals below until you achieve an exact match. Then, replace the suggested Smart Kit (Customer Replaceable Unit).

Depending on the location of the defects, you may need to fold the print as shown in the photo, to better align the defects with the markers.

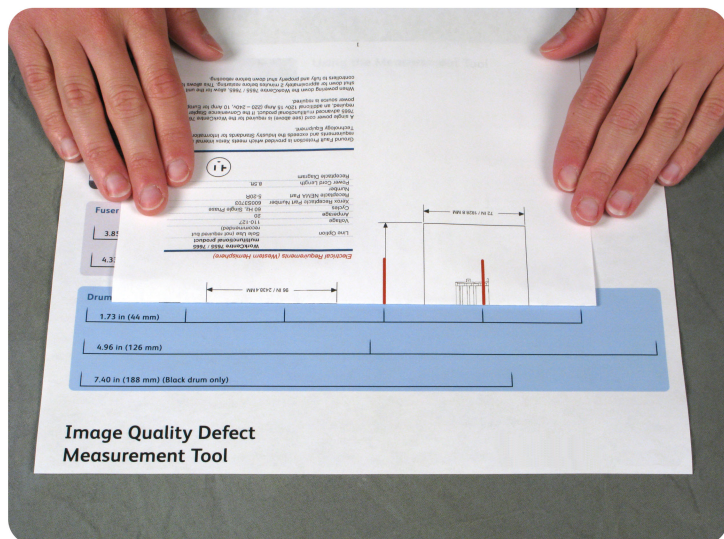

### Fuser Defect Intervals

3.30 in (84mm)

3.70 in (94mm) (Dents in Paper)

### Drum Defect Intervals

3.74 in (95 mm)

1.49 in (38 mm)

### Second Bias Transfer Roll Defect Intervals

2.16 in (55 mm)

Image Quality Defect  
Measurement Tool

WorkCentre™ 7425/7428/7435

701P49651